

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County ACAMANCE Instrument Location STATE MONITORING UNIT C

Instrument Serial No. 008696 MAGANE

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 5 day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]

Signature of Certifying Official

663

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

ALAMANCE COUNTY BAT MOBILE UNIT 6 000

Serial Number: 008686  
Test Date: 09/05/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Varnell, Bryon L  
Permit Number: 0036-1210  
Effective:  
08/14/2019-08/14/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG911506  
Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	9:24pm
AIR BLK	.00	9:25pm
ACCY CHK	.07	9:26pm
AIR BLK	.00	9:27pm
SUB TEST	.00	9:27pm
AIR BLK	.00	9:28pm
SUB TEST	.00	9:30pm
AIR BLK	.00	9:31pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

**Intox EC/IR-II: Preventive Maintenance**

ALAMANCE COUNTY BAT MOBILE UNIT 6 000

Serial Number: 008686      Test Record Number: 6708  
Test Date: 09/05/2020      Test Time: 9:32pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	9:32pm
FLO	Pass	9:32pm
FC	Pass	9:33pm

Temperature Tests

Test	Status	Time
FC1	Pass	9:33pm
SRC	Pass	9:33pm
DET	Pass	9:33pm
BAR	Pass	9:33pm
BT	Pass	9:33pm

Blank Tests

Test	Status	Time
AIR	Pass	9:33pm

Printer Tests

Test	Status	Time
PRNT	Pass	9:33pm

CRC Tests

Test	Status	Time
COMP	Pass	9:34pm
CAL	Pass	9:34pm

Preventive Maintenance  
Status: Pass



**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Alexander Instrument Location Alexander County  
Instrument Serial No. 008813 Sheriff's Office

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 4 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



M. A. [Signature]  
Signature of Certifying Official

656  
Certificate Number



Intox EC/IR-II: Subject Test

ALEXANDER COUNTY ALEXANDER COUNTY SO  
010

Serial Number: 008813  
Test Date: 09/04/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Hays, Mark D

Permit Number: 0011-3099

Effective:

11/13/2019-11/13/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG902201

Exp Date: 01/22/2021

Test	g/210L	Time
DIAG	Pass	9:37am
AIR BLK	.00	9:38am
ACCY CHK	.08	9:39am
AIR BLK	.00	9:40am
SUB TEST	.00	9:41am
AIR BLK	.00	9:42am
SUB TEST	.00	9:44am
AIR BLK	.00	9:45am

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

ALEXANDER COUNTY ALEXANDER COUNTY SC 010

Serial Number: 008813 Test Record Number: 1964  
Test Date: 09/04/2020 Test Time: 9:46am EDT

System Check: Passed

Baseline Tests

Test	Status	Time
IR	Pass	9:46am
FLO	Pass	9:46am
FC	Pass	9:46am

Temperature Tests

Test	Status	Time
FC1	Pass	9:47am
SRC	Pass	9:47am
DET	Pass	9:47am
BAR	Pass	9:47am
BT	Pass	9:47am

Blank Tests

Test	Status	Time
AIR	Pass	9:47am


Printer Tests

Test	Status	Time
PRNT	Pass	9:47am

CRC Tests

Test	Status	Time
COMP	Pass	9:47am
CAL	Pass	9:47am

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County ALLEGHANY Instrument Location ALLEGHANY CO. JAIL

Instrument Serial No. 008890 SPARTA, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 4 day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

669  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

ALLEGHANY COUNTY ALLEGHANY CO JAIL 020

Serial Number: 008890  
Test Date: 09/04/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Oligmueller Jr., Leo A  
Permit Number: 0035-3799  
Effective:  
08/04/2020-08/04/2022

Officer's Name: NONE,  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

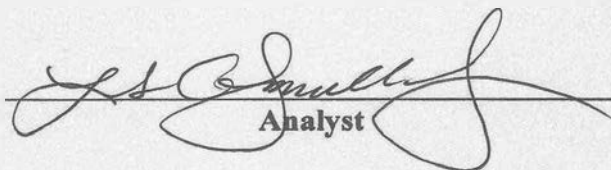
Lot Number: AG007601  
Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	1:08pm
AIR BLK	.00	1:09pm
ACCY CHK	.07	1:10pm
AIR BLK	.00	1:11pm
<b>SUB TEST</b>	<b>.00</b>	<b>1:11pm</b>
AIR BLK	.00	1:12pm
<b>SUB TEST</b>	<b>.00</b>	<b>1:15pm</b>
AIR BLK	.00	1:16pm

Reported AC: .00 g/210L

Signature of Chemical Analyst

Court CVR

  
Analyst

This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007

Intox EC/IR-II: Preventive Maintenance

ALLEGHANY COUNTY ALLEGHANY CO JAIL 020

Serial Number: 008890      Test Record Number: 824  
Test Date: 09/04/2020      Test Time: 1:17pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	1:17pm
FLO	Pass	1:17pm
FC	Pass	1:18pm

Temperature Tests

Test	Status	Time
FC1	Pass	1:18pm
SRC	Pass	1:18pm
DET	Pass	1:18pm
BAR	Pass	1:18pm
BT	Pass	1:18pm

Blank Tests

Test	Status	Time
AIR	Pass	1:18pm

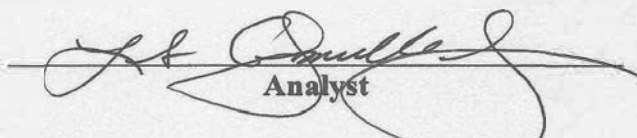
Printer Tests

Test	Status	Time
PRNT	Pass	1:18pm

CRC Tests

Test	Status	Time
COMP	Pass	1:18pm
CAL	Pass	1:18pm

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Beaufort

Instrument Location Beaufort Co. Courthouse

Instrument Serial No. 008586

112 W. 2nd St., Washington, N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 17th day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



James K. Kover  
Signature of Certifying Official

647  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

BEAUFORT COUNTY COURTHOUSE 060

Serial Number: 008586  
Test Date: 09/17/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Keesler, Linda A  
Permit Number: 0045-5468  
Effective:  
07/08/2019-07/08/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG007601  
Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	4:01pm
AIR BLK	.00	4:01pm
ACCY CHK	.08	4:02pm
AIR BLK	.00	4:03pm
<b>SUB TEST</b>	<b>.00</b>	<b>4:04pm</b>
AIR BLK	.00	4:05pm
<b>SUB TEST</b>	<b>.00</b>	<b>4:06pm</b>
AIR BLK	.00	4:07pm

Reported AC: 00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

BEAUFORT COUNTY COURTHOUSE 060

Serial Number: 008586      Test Record Number: 1655  
Test Date: 09/17/2020      Test Time: 4:10pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	4:10pm
FLO	Pass	4:10pm
FC	Pass	4:11pm

Temperature Tests

Test	Status	Time
FC1	Pass	4:11pm
SRC	Pass	4:11pm
DET	Pass	4:11pm
BAR	Pass	4:11pm
BT	Pass	4:11pm

Blank Tests

Test	Status	Time
AIR	Pass	4:11pm


Printer Tests

Test	Status	Time
PRNT	Pass	4:11pm

CRC Tests

Test	Status	Time
COMP	Pass	4:11pm
CAL	Pass	4:11pm

Preventive Maintenance  
Status: Pass



Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**



DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)

County Beaufort Instrument Location Beaufort CO. Courthouse  
Instrument Serial No. 008909 112 W 2<sup>nd</sup> ST., Washington, N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 17<sup>th</sup> day of SEPTEMBER, 2022 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Linda Kew  
Signature of Certifying Official

647  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

BEAUFORT COUNTY COURTHOUSE 060

Serial Number: 008909

Test Date: 09/17/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Keesler, Linda A

Permit Number: 0045-5468

Effective:

07/08/2019-07/08/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG007601


Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	4:04pm
AIR BLK	.00	4:04pm
ACCY CHK	.08	4:05pm
AIR BLK	.00	4:06pm
<b>SUB TEST</b>	<b>.00</b>	<b>4:07pm</b>
AIR BLK	.00	4:08pm
<b>SUB TEST</b>	<b>.00</b>	<b>4:09pm</b>
AIR BLK	.00	4:10pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

BEAUFORT COUNTY COURTHOUSE 060

Serial Number: 008909      Test Record Number: 3528  
Test Date: 09/17/2020      Test Time: 4:11pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	4:11pm
FLO	Pass	4:11pm
FC	Pass	4:11pm

Temperature Tests

Test	Status	Time
FC1	Pass	4:11pm
SRC	Pass	4:11pm
DET	Pass	4:11pm
BAR	Pass	4:11pm
BT	Pass	4:11pm

Blank Tests

Test	Status	Time
AIR	Pass	4:12pm


Printer Tests

Test	Status	Time
PRNT	Pass	4:12pm

CRC Tests

Test	Status	Time
COMP	Pass	4:12pm
CAL	Pass	4:12pm

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Bertie Instrument Location Bertie Co S.O.

Instrument Serial No. 008897 222 County Farm Rd, Windsor, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 18<sup>th</sup> day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

643  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

BERTIE COUNTY BERTIE CO SO 070

Serial Number: 008897

Test Date: 09/18/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: GUARD, KELLY G

Permit Number: 12955E

Effective:

06/01/2019-06/01/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS


Test Type: Breath Test

Lot Number: AG911506


Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	10:16am
AIR BLK	.00	10:17am
ACCY CHK	.08	10:17am
AIR BLK	.00	10:18am
<b>SUB TEST</b>	<b>.00</b>	<b>10:19am</b>
AIR BLK	.00	10:20am
<b>SUB TEST</b>	<b>.00</b>	<b>10:22am</b>
AIR BLK	.00	10:23am

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

Intox EC/IR-II: Preventive Maintenance

BERTIE COUNTY BERTIE CO SO 070

Serial Number: 008897      Test Record Number: 1359  
Test Date: 09/18/2020      Test Time: 10:24am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	10:25am
FLO	Pass	10:25am
FC	Pass	10:25am

Temperature Tests

Test	Status	Time
FC1	Pass	10:25am
SRC	Pass	10:25am
DET	Pass	10:25am
BAR	Pass	10:25am
BT	Pass	10:25am

Blank Tests

Test	Status	Time
AIR	Pass	10:25am

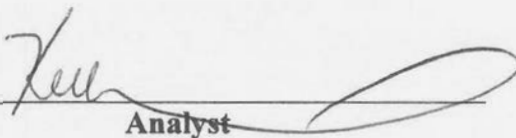
Printer Tests

Test	Status	Time
PRNT	Pass	10:26am

CRC Tests

Test	Status	Time
COMP	Pass	10:26am
CAL	Pass	10:26am

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Camden Instrument Location Camden Co. S.O.  
Instrument Serial No. 008940 117 N. Carolina Hwy 343  
Camden, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 29<sup>th</sup> day of September, 2010 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

643  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

CAMDEN COUNTY CAMDEN CO SO 140

Serial Number: 008940  
Test Date: 09/29/2020

Citation Number: M0000006-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: GUARD, KELLY G  
Permit Number: 12955E  
Effective:  
06/01/2019-06/01/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

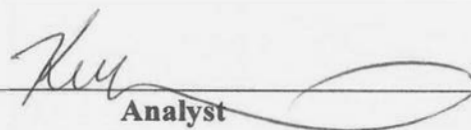
Lot Number: AG911501  
Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	12:07pm
AIR BLK	.00	12:08pm
ACCY CHK	.08	12:08pm
AIR BLK	.00	12:09pm
SUB TEST	.00	12:10pm
AIR BLK	.00	12:11pm
SUB TEST	.00	12:13pm
AIR BLK	.00	12:13pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst



Intox EC/IR-II: Preventive Maintenance

CAMDEN COUNTY CAMDEN CO SO 140

Serial Number: 008940      Test Record Number: 1045  
Test Date: 09/29/2020      Test Time: 12:15pm EDT

System Check: Passed

Baseline Tests

Test	Status	Time
IR	Pass	12:15pm
FLC	Pass	12:15pm
FC	Pass	12:15pm

Temperature Tests

Test	Status	Time
FC1	Pass	12:15pm
SRC	Pass	12:15pm
DET	Pass	12:15pm
BAR	Pass	12:15pm
BT	Pass	12:15pm

Blank Tests

Test	Status	Time
AIR	Pass	12:16pm


Printer Tests

Test	Status	Time
PRNT	Pass	12:16pm

CRC Tests

Test	Status	Time
COMP	Pass	12:16pm
CAL	Pass	12:16pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County CHATHAM Instrument Location CHATHAM CO. DETENTION CENTER  
Instrument Serial No. 008591 PITTSBORO, N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 21<sup>ST</sup> day of SEPTEMBER, 2020, the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Handwritten Signature]  
Signature of Certifying Official

667  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

CHATHAM COUNTY DETENTION CENTER 180

Serial Number: 008591  
Test Date: 09/21/2020

Citation Number: M0000000-0  
Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Galloway, Charles L

Permit Number: 0023-9771

Effective:

02/17/2020-02/17/2022

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG934001  
Exp Date: 12/06/2021

Test	g/210L	Time
DIAG	Pass	10:20am
AIR BLK	.00	10:21am
ACCY CHK	.08	10:21am
AIR BLK	.00	10:22am
<b>SUB TEST</b>	<b>.00</b>	<b>10:23am</b>
AIR BLK	.00	10:24am
<b>SUB TEST</b>	<b>.00</b>	<b>10:26am</b>
AIR BLK	.00	10:27am

Reported AC: .00 g/210L

Signature of Chemical Analyst

Court CVR



Analyst

This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007

Intox EC/IR-II: Preventive Maintenance

CHATHAM COUNTY DETENTION CENTER 180

Serial Number: 008591      Test Record Number: 2422  
Test Date: 09/21/2020      Test Time: 10:28am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	10:28am
FLO	Pass	10:28am
FC	Pass	10:28am

Temperature Tests

Test	Status	Time
FC1	Pass	10:28am
SRC	Pass	10:28am
DET	Pass	10:28am
BAR	Pass	10:28am
BT	Pass	10:28am

Blank Tests

Test	Status	Time
AIR	Pass	10:29am


Printer Tests

Test	Status	Time
PRNT	Pass	10:29am

CRC Tests

Test	Status	Time
COMP	Pass	10:29am
CAL	Pass	10:29am

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County CHATHAM Instrument Location SILER CITY POLICE DEPT.

Instrument Serial No. 008811 SILER CITY, N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 21<sup>ST</sup> day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Handwritten Signature]  
Signature of Certifying Official

667  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

CHATHAM COUNTY SILER CITY PD 180

Serial Number: 008811  
Test Date: 09/21/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Galloway, Charles L

Permit Number: 0023-9771

Effective:

02/17/2020-02/17/2022

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG911501


Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	1:47pm
AIR BLK	.00	1:48pm
ACCY CHK	.08	1:49pm
AIR BLK	.00	1:50pm
<b>SUB TEST</b>	<b>.00</b>	<b>1:50pm</b>
AIR BLK	.00	1:51pm
<b>SUB TEST</b>	<b>.00</b>	<b>1:53pm</b>
AIR BLK	.00	1:54pm

Reported AC: .00 g/210L

\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**Intox EC/IR-II: Preventive Maintenance**

CHATHAM COUNTY SILER CITY PD 180

Serial Number: 008811      Test Record Number: 1438  
Test Date: 09/21/2020      Test Time: 1:57pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	1:57pm
FLO	Pass	1:57pm
FC	Pass	1:57pm

Temperature Tests

Test	Status	Time
FC1	Pass	1:57pm
SRC	Pass	1:57pm
DET	Pass	1:57pm
BAR	Pass	1:57pm
BT	Pass	1:57pm

Blank Tests

Test	Status	Time
AIR	Pass	1:58pm


Printer Tests

Test	Status	Time
PRNT	Pass	1:58pm

CRC Tests

Test	Status	Time
COMP	Pass	1:58pm
CAL	Pass	1:58pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County CURRITUCK Instrument Location CURRITUCK CO. S.O.  
Instrument Serial No. 008588 407A MAPLE RD., MAPLE, N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 14th day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Jim Hurd  
Signature of Certifying Official

647  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.



Intox EC/IR-II: Subject Test

CURRITUCK COUNTY CURRITUCK SO-MAPLE  
260

Serial Number: 008588  
Test Date: 09/14/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Keesler, Linda A  
Permit Number: 0045-5468  
Effective:  
07/08/2019-07/08/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

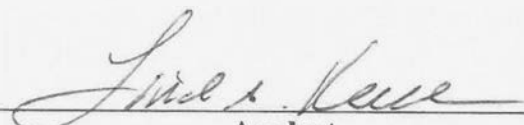
Lot Number: AG933703  
Exp Date: 12/03/2021

Test	g/210L	Time
DIAG	Pass	1:01pm
AIR BLK	.00	1:02pm
ACCY CHK	.08	1:02pm
AIR BLK	.00	1:03pm
<b>SUB TEST</b>	<b>.00</b>	<b>1:04pm</b>
AIR BLK	.00	1:05pm
<b>SUB TEST</b>	<b>.00</b>	<b>1:06pm</b>
AIR BLK	.00	1:07pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**Intox EC/IR-II: Preventive Maintenance**

CURRITUCK COUNTY CURRITUCK SO-MAPLE 260

Serial Number: 008588      Test Record Number: 1075  
Test Date: 09/14/2020      Test Time: 1:08pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	1:08pm
FLO	Pass	1:08pm
FC	Pass	1:08pm

Temperature Tests

Test	Status	Time
FC1	Pass	1:08pm
SRC	Pass	1:08pm
DET	Pass	1:08pm
BAR	Pass	1:08pm
BT	Pass	1:08pm

Blank Tests

Test	Status	Time
AIR	Pass	1:09pm


Printer Tests

Test	Status	Time
PRNT	Pass	1:09pm

CRC Tests

Test	Status	Time
COMP	Pass	1:09pm
CAL	Pass	1:09pm

Preventive Maintenance  
Status: Pass

  
**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Currituck Instrument Location Currituck Co. S.D.  
Instrument Serial No. 1108947 407-A Maple Rd., Maple, NC.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 29<sup>th</sup> day of September, 2010 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

643  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

CURRITUCK COUNTY CURRITUCK SO-MAPLE  
260

Serial Number: 008947  
Test Date: 09/29/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE


Analyst's Name: GUARD, KELLY G  
Permit Number: 12955E  
Effective:  
06/01/2019-06/01/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test


Lot Number: AG933703  
Exp Date: 12/03/2021

Test	g/210L	Time
DIAG	Pass	11:21am
AIR BLK	.00	11:22am
ACCY CHK	.08	11:22am
AIR BLK	.00	11:23am
<b>SUB TEST</b>	<b>.00</b>	<b>11:24am</b>
AIR BLK	.00	11:24am
<b>SUB TEST</b>	<b>.00</b>	<b>11:26am</b>
AIR BLK	.00	11:27am

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

CURRITUCK COUNTY CURRITUCK SO-MAPLE 260

Serial Number: 008947      Test Record Number: 2712  
Test Date: 09/29/2020      Test Time: 11:28am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	11:29am
FLO	Pass	11:29am
FC	Pass	11:29am

Temperature Tests

Test	Status	Time
FC1	Pass	11:29am
SRC	Pass	11:29am
DET	Pass	11:29am
BAR	Pass	11:29am
BT	Pass	11:29am

Blank Tests

Test	Status	Time
AIR	Pass	11:30am

Printer Tests

Test	Status	Time
PRNT	Pass	11:30am

CRC Tests

Test	Status	Time
COMP	Pass	11:30am
CAL	Pass	11:30am

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County DARE Instrument Location SAT MOUNT UNIT 6

Instrument Serial No. 00Y776 NALS HEAD

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 2 day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

663  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

DARE COUNTY BAT MOBILE UNIT 6 270

Serial Number: 008776  
Test Date: 09/02/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE


Analyst's Name: Varnell, Bryon L  
Permit Number: 0036-1210  
Effective:  
08/14/2019-08/14/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

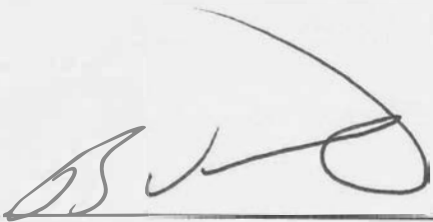
Lot Number: AG902201  
Exp Date: 01/22/2021

Test	g/210L	Time
DIAG	Pass	9:52pm
AIR BLK	.00	9:53pm
ACCY CHK	.07	9:54pm
AIR BLK	.00	9:55pm
<b>SUB TEST</b>	<b>.00</b>	<b>9:55pm</b>
AIR BLK	.00	9:56pm
<b>SUB TEST</b>	<b>.00</b>	<b>9:58pm</b>
AIR BLK	.00	9:59pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**Intox EC/IR-II: Preventive Maintenance**

*DARE COUNTY BAT MOBILE UNIT 6 270*

Serial Number: 008776      Test Record Number: 3596  
Test Date: 09/02/2020      Test Time: 10:00pm EDT

System Check: *Passed*

**Baseline Tests**

Test	Status	Time
IR	Pass	10:00pm
FLO	Pass	10:00pm
FC	Pass	10:00pm

**Temperature Tests**

Test	Status	Time
FC1	Pass	10:00pm
SRC	Pass	10:00pm
DET	Pass	10:00pm
BAR	Pass	10:00pm
BT	Pass	10:00pm

**Blank Tests**

Test	Status	Time
AIR	Pass	10:01pm

**Printer Tests**

Test	Status	Time
PRNT	Pass	10:01pm

**CRC Tests**

Test	Status	Time
COMP	Pass	10:01pm
CAL	Pass	10:01pm

Preventive Maintenance  
Status: Pass



**Analyst**



DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Davidson Instrument Location But Mobile Unit 1

Instrument Serial No. 008967 DCSO

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 5 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Chovy

Signature of Certifying Official

658

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

DAVIDSON COUNTY BAT MOBILE UNIT 1 280

Serial Number: 008869  
Test Date: 09/05/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: TOWERY, CHAD V  
Permit Number: 26632E  
Effective:  
05/01/2019-05/01/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG902201  
Exp Date: 01/22/2021

Test	g/210L	Time
DIAG	Pass	6:59pm
AIR BLK	.00	7:00pm
ACCY CHK	.07	7:01pm
AIR BLK	.00	7:01pm
<b>SUB TEST</b>	<b>.00</b>	<b>7:02pm</b>
AIR BLK	.00	7:03pm
<b>SUB TEST</b>	<b>.00</b>	<b>7:04pm</b>
AIR BLK	.00	7:05pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

DAVIDSON COUNTY BAT MOBILE UNIT 1 280

Serial Number: 008869      Test Record Number: 1069  
Test Date: 09/05/2020      Test Time: 7:10pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	7:10pm
FLO	Pass	7:10pm
FC	Pass	7:10pm

Temperature Tests

Test	Status	Time
FC1	Pass	7:10pm
SRC	Pass	7:10pm
DET	Pass	7:10pm
BAR	Pass	7:10pm
BT	Pass	7:10pm

Blank Tests

Test	Status	Time
AIR	Pass	7:11pm


Printer Tests

Test	Status	Time
PRNT	Pass	7:11pm

CRC Tests

Test	Status	Time
COMP	Pass	7:11pm
CAL	Pass	7:11pm

Preventive Maintenance  
Status: Pass



Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Davidson Instrument Location Bad Mobile Unit 1  
Instrument Serial No. 008898 DCSO

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 5 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Chloe Joy  
Signature of Certifying Official

658  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

DAVIDSON COUNTY BAT MOBILE UNIT 1 280

Serial Number: 008898  
Test Date: 09/05/2020

Citation Number: M0000000-0  
Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: TOWERY, CHAD V

Permit Number: 26632E

Effective:

05/01/2019-05/01/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG902201

Exp Date: 01/22/2021

Test	g/210L	Time
DIAG	Pass	6:57pm
AIR BLK	.00	6:58pm
ACCY CHK	.07	6:59pm
AIR BLK	.00	7:00pm
SUB TEST	.00	7:01pm
AIR BLK	.00	7:01pm
SUB TEST	.00	7:03pm
AIR BLK	.00	7:04pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

Intox EC/IR-II: Preventive Maintenance

DAVIDSON COUNTY BAT MOBILE UNIT 1 280

Serial Number: 008898      Test Record Number: 1055  
Test Date: 09/05/2020      Test Time: 7:10pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	7:10pm
FLO	Pass	7:10pm
FC	Pass	7:10pm

Temperature Tests

Test	Status	Time
FC1	Pass	7:10pm
SRC	Pass	7:10pm
DET	Pass	7:10pm
BAR	Pass	7:10pm
BT	Pass	7:10pm

Blank Tests

Test	Status	Time
AIR	Pass	7:11pm

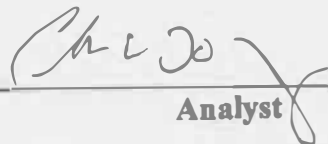
Printer Tests

Test	Status	Time
PRNT	Pass	7:11pm

CRC Tests

Test	Status	Time
COMP	Pass	7:11pm
CAL	Pass	7:11pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Davidson Instrument Location BAT MOBILE 3  
Instrument Serial No. 008971 NCWRC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 6<sup>th</sup> day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

659  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

DAVIDSON BAT MOBILE 3 280

Serial Number: 008971

Test Date: 09/06/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Ingle, Larry W

Permit Number: 0035-2495

Effective:

01/09/2020-01/09/2022

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG831801

Exp Date: 11/14/2020

Test	g/210L	Time
DIAG	Pass	5:33pm
AIR BLK	.00	5:34pm
ACCY CHK	.08	5:35pm
AIR BLK	.00	5:35pm
<b>SUB TEST</b>	<b>.00</b>	<b>5:37pm</b>
AIR BLK	.00	5:38pm
<b>SUB TEST</b>	<b>.00</b>	<b>5:39pm</b>
AIR BLK	.00	5:40pm

Reported AC: .00 g/210L

\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

\_\_\_\_\_  
Analyst



Intox EC/IR-II: Preventive Maintenance

DAVIDSON BAT MOBILE 3 280

Serial Number: 008971      Test Record Number: 258  
Test Date: 09/06/2020      Test Time: 5:44pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	5:45pm
FLO	Pass	5:45pm
FC	Pass	5:45pm

Temperature Tests

Test	Status	Time
FC1	Pass	5:45pm
SRC	Pass	5:45pm
DET	Pass	5:45pm
BAR	Pass	5:45pm
BT	Pass	5:45pm

Blank Tests

Test	Status	Time
AIR	Pass	5:45pm

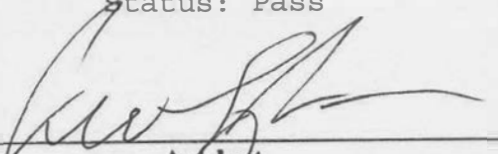
Printer Tests

Test	Status	Time
PRNT	Pass	5:46pm

CRC Tests

Test	Status	Time
COMP	Pass	5:46pm
CAL	Pass	5:46pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Edgecombe Instrument Location Edgecombe Co. Magistrate's  
Office, 300 S. ANACONDA Rd.,  
TARBORO, N.C.

Instrument Serial No. 008603

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 25<sup>th</sup> day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Linda A. Reed  
Signature of Certifying Official

647  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

EDGECOMBE COUNTY EDGECOMBE CO MAGISTR  
320

Serial Number: 008603  
Test Date: 09/25/2020

Citation Number: M0000000-0  
Subject's Name:  
*PREVENTIVE, MAINTENANCE*  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Keesler, Linda A  
Permit Number: 0045-5468  
Effective:  
07/08/2019-07/08/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test


Lot Number: AG007601  
Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	12:15pm
AIR BLK	.00	12:15pm
ACCY CHK	.08	12:16pm
AIR BLK	.00	12:17pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:18pm</b>
AIR BLK	.00	12:19pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:20pm</b>
AIR BLK	.00	12:21pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

EDGECOMBE COUNTY EDGECOMBE CO MAGISTR 320

Serial Number: 008603      Test Record Number: 1852  
Test Date: 09/25/2020      Test Time: 12:22pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	12:22pm
FLO	Pass	12:22pm
FC	Pass	12:22pm

Temperature Tests

Test	Status	Time
FC1	Pass	12:22pm
SRC	Pass	12:22pm
DET	Pass	12:22pm
BAR	Pass	12:22pm
BT	Pass	12:22pm

Blank Tests

Test	Status	Time
AIR	Pass	12:23pm


Printer Tests

Test	Status	Time
PRNT	Pass	12:23pm

CRC Tests

Test	Status	Time
COMP	Pass	12:23pm
CAL	Pass	12:23pm

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Edgemont Instrument Location Edgemont Co. Magistrate's  
Instrument Serial No. 008663 Office, 300 S. Anacosta Rd.,  
TARBOUR, N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 25<sup>th</sup> day of September, 2030 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Linda A. Neal  
Signature of Certifying Official

647  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

EDGECOMBE COUNTY EDGECOMBE CO MAGISTR  
320

Serial Number: 008663  
Test Date: 09/25/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Keesler, Linda A

Permit Number: 0045-5468

Effective:

07/08/2019-07/08/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG902201

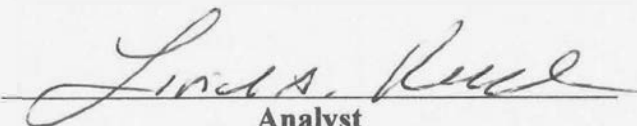
Exp Date: 01/22/2021

Test	g/210L	Time
DIAG	Pass	12:16pm
AIR BLK	.00	12:17pm
ACCY CHK	.08	12:17pm
AIR BLK	.00	12:18pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:19pm</b>
AIR BLK	.00	12:20pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:21pm</b>
AIR BLK	.00	12:22pm

Reported AC: .00 g/210L

  
Signature of Chemical Analyst

Court CVR

  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

Intox EC/IR-II: Preventive Maintenance

EDGECOMBE COUNTY EDGECOMBE CO MAGISTR 320

Serial Number: 008663      Test Record Number: 3346  
Test Date: 09/25/2020      Test Time: 12:22pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	12:23pm
FLO	Pass	12:23pm
FC	Pass	12:23pm

Temperature Tests

Test	Status	Time
FC1	Pass	12:23pm
SRC	Pass	12:23pm
DET	Pass	12:23pm
BAR	Pass	12:23pm
BT	Pass	12:23pm

Blank Tests

Test	Status	Time
AIR	Pass	12:24pm


Printer Tests

Test	Status	Time
PRNT	Pass	12:24pm

CRC Tests

Test	Status	Time
COMP	Pass	12:24pm
CAL	Pass	12:24pm

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County GUILFORD Instrument Location GREENSBORO JAIL

Instrument Serial No. 008638 GREENSBORO

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 28<sup>TH</sup> day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

669  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.



**Intox EC/IR-II: Subject Test**

GUILFORD COUNTY GREENSBORO JAIL 400

Serial Number: 008638  
Test Date: 09/28/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: OLIGMUELLER JR., LEO A  
Permit Number: 0035-3799  
Effective:  
08/04/2020-08/04/2022

Officer's Name: NONE,  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test


Lot Number: AG919902  
Exp Date: 07/18/2021

Test	g/210L	Time
DIAG	Pass	11:42am
AIR BLK	.00	11:43am
ACCY CHK	.08	11:44am
AIR BLK	.00	11:45am
<b>SUB TEST</b>	<b>.00</b>	<b>11:46am</b>
AIR BLK	.00	11:46am
<b>SUB TEST</b>	<b>.00</b>	<b>11:48am</b>
AIR BLK	.00	11:49am

**Reported AC: .00 g/210L**

\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
Analyst

**Intox EC/IR-II: Preventive Maintenance**

GUILFORD COUNTY GREENSBORO JAIL 400

Serial Number: 008638      Test Record Number: 4632  
Test Date: 09/28/2020      Test Time: 11:51am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	11:51am
FLO	Pass	11:51am
FC	Pass	11:51am

Temperature Tests

Test	Status	Time
FC1	Pass	11:51am
SRC	Pass	11:51am
DET	Pass	11:51am
BAR	Pass	11:51am
BT	Pass	11:51am

Blank Tests

Test	Status	Time
AIR	Pass	11:52am

Printer Tests

Test	Status	Time
PRNT	Pass	11:52am

CRC Tests

Test	Status	Time
COMP	Pass	11:52am
CAL	Pass	11:52am

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County GUILFORD Instrument Location GREENSBORO JAIL

Instrument Serial No. 008790 GREENSBORO

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 28 day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

669  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

GUILFORD COUNTY GREENSBORO JAIL 400

Serial Number: 008790  
Test Date: 09/28/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: OLIGMUELLER JR., LEO A  
Permit Number: 0035-3799  
Effective:  
08/04/2020-08/04/2022

Officer's Name: NONE,  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

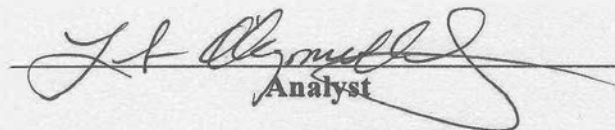
Lot Number: AG018202  
Exp Date: 06/30/2022

Test	g/210L	Time
DIAG	Pass	12:29pm
AIR BLK	.00	12:30pm
ACCY CHK	.08	12:30pm
AIR BLK	.00	12:31pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:32pm</b>
AIR BLK	.00	12:33pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:35pm</b>
AIR BLK	.00	12:36pm

Reported AC: .00 g/210L

\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
Analyst

This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007

Intox EC/IR-II: Preventive Maintenance

GUILFORD COUNTY GREENSBORO JAIL 400

Serial Number: 008790      Test Record Number: 7012  
Test Date: 09/28/2020      Test Time: 12:37pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	12:38pm
FLO	Pass	12:38pm
FC	Pass	12:38pm

Temperature Tests

Test	Status	Time
FC1	Pass	12:38pm
SRC	Pass	12:38pm
DET	Pass	12:38pm
BAR	Pass	12:38pm
BT	Pass	12:38pm

Blank Tests

Test	Status	Time
AIR	Pass	12:39pm

Printer Tests

Test	Status	Time
PRNT	Pass	12:39pm

CRC Tests

Test	Status	Time
COMP	Pass	12:39pm
CAL	Pass	12:39pm

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County GUILFORD Instrument Location GREENSBORO TAIL

Instrument Serial No. 008794 GREENSBORO

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 28 day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

669  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

GUILFORD COUNTY GREENSBORO JAIL 400

Serial Number: 008794  
Test Date: 09/28/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: OLIGMUELLER JR., LEO A  
Permit Number: 0035-3799  
Effective:  
08/04/2020-08/04/2022

Officer's Name: NONE,  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

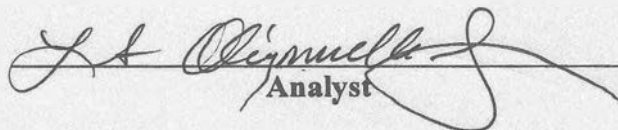
Lot Number: AG007601  
Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	12:00pm
AIR BLK	.00	12:01pm
ACCY CHK	.08	12:02pm
AIR BLK	.00	12:03pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:04pm</b>
AIR BLK	.00	12:04pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:06pm</b>
AIR BLK	.00	12:07pm

Reported AC: .00 g/210L

\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
Analyst

This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007

Intox EC/IR-II: Preventive Maintenance

GUILFORD COUNTY GREENSBORO JAIL 400

Serial Number: 008794      Test Record Number: 7006  
Test Date: 09/28/2020      Test Time: 12:11pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	12:11pm
FLO	Pass	12:11pm
FC	Pass	12:11pm

Temperature Tests

Test	Status	Time
FC1	Pass	12:11pm
SRC	Pass	12:11pm
DET	Pass	12:11pm
BAR	Pass	12:11pm
BT	Pass	12:11pm

Blank Tests

Test	Status	Time
AIR	Pass	12:12pm

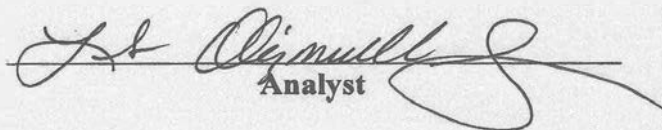
Printer Tests

Test	Status	Time
PRNT	Pass	12:12pm

CRC Tests

Test	Status	Time
COMP	Pass	12:12pm
CAL	Pass	12:12pm

Preventive Maintenance  
Status: Pass

  
Analyst



DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Guilford Instrument Location Gibsonville PD  
Instrument Serial No. 008812 129 W. MAIN ST Gibsonville, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 9 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]

Signature of Certifying Official

642

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

GUILFORD COUNTY GIBSONVILLE PD 400

Serial Number: 008812

Test Date: 09/09/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: BARNES, STOKES

Permit Number: 11434E

Effective:

04/01/2019-04/01/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG007601

Exp Date: 03/16/2022


Test	g/210L	Time
DIAG	Pass	2:50pm
AIR BLK	.00	2:51pm
ACCY CHK	.08	2:52pm
AIR BLK	.00	2:53pm
<b>SUB TEST</b>	<b>.00</b>	<b>2:53pm</b>
AIR BLK	.00	2:54pm
<b>SUB TEST</b>	<b>.00</b>	<b>2:57pm</b>
AIR BLK	.00	2:57pm

Reported AC: .00 g/210L



Signature of Chemical Analyst

Court CVR



Analyst

Intox EC/IR-II: Preventive Maintenance

GUILFORD COUNTY GIBSONVILLE PD 400

Serial Number: 008812      Test Record Number: 3493  
Test Date: 09/09/2020      Test Time: 3:00pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	3:00pm
FLO	Pass	3:00pm
FC	Pass	3:00pm

Temperature Tests

Test	Status	Time
FC1	Pass	3:00pm
SRC	Pass	3:00pm
DET	Pass	3:00pm
BAR	Pass	3:00pm
BT	Pass	3:00pm

Blank Tests

Test	Status	Time
AIR	Pass	3:01pm

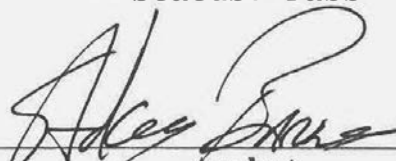
Printer Tests

Test	Status	Time
PRNT	Pass	3:01pm

CRC Tests

Test	Status	Time
COMP	Pass	3:01pm
CAL	Pass	3:01pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County HARNETT Co. Instrument Location Dunn Police Dept.  
Instrument Serial No. 008644 DUNN, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced With serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 2<sup>nd</sup> day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]

Signature of Certifying Official

654

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

HARNETT COUNTY DUNN PD 420

Serial Number: 008644

Test Date: 09/02/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Keesler, Grayham C

Permit Number: 0045-5487

Effective:

11/04/2019-11/04/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

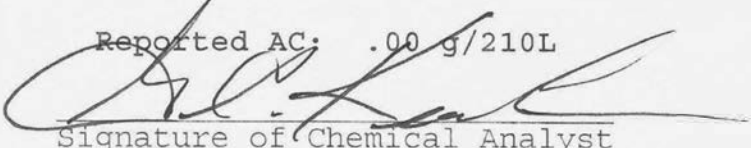
Test Type: Breath Test

Lot Number: AG911501

Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	2:39pm
AIR BLK	.00	2:39pm
ACCY CHK	.07	2:40pm
AIR BLK	.00	2:41pm
<b>SUB TEST</b>	<b>.00</b>	<b>2:42pm</b>
AIR BLK	.00	2:43pm
<b>SUB TEST</b>	<b>.00</b>	<b>2:44pm</b>
AIR BLK	.00	2:45pm

Reported AC: .00 g/210L



Signature of Chemical Analyst

Court CVR



Analyst

Intox EC/IR-II: Preventive Maintenance

HARNETT COUNTY DUNN PD 420

Serial Number: 008644      Test Record Number: 1449  
Test Date: 09/02/2020      Test Time: 2:46pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	2:46pm
FLO	Pass	2:46pm
FC	Pass	2:46pm

Temperature Tests

Test	Status	Time
FC1	Pass	2:46pm
SRC	Pass	2:46pm
DET	Pass	2:46pm
BAR	Pass	2:46pm
BT	Pass	2:46pm

Blank Tests

Test	Status	Time
AIR	Pass	2:47pm

Printer Tests

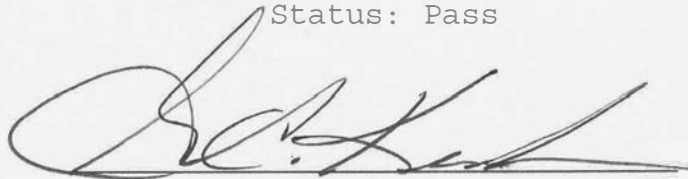
Test	Status	Time
PRNT	Pass	2:47pm

CRC Tests

Test	Status	Time
COMP	Pass	2:47pm
CAL	Pass	2:47pm

Preventive Maintenance

Status: Pass



Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County HARNETT Co. Instrument Location HARNETT Co Detention Center

Instrument Serial No. 008429 Wilmington, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 24<sup>th</sup> day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

654  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

HARNETT COUNTY DETENTION CENTER 420

Serial Number: 008729  
Test Date: 09/24/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

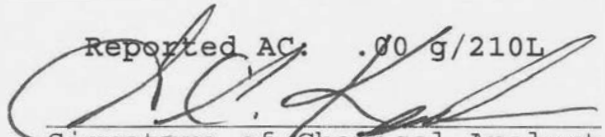
Analyst's Name: Keesler, Grayham C  
Permit Number: 0045-5487  
Effective:  
11/04/2019-11/04/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG911501  
Exp Date: 04/25/2021


Test	g/210L	Time
DIAG	Pass	10:59am
AIR BLK	.00	10:59am
ACCY CHK	.08	11:00am
AIR BLK	.00	11:01am
SUB TEST	.00	11:01am
AIR BLK	.00	11:02am
SUB TEST	.00	11:04am
AIR BLK	.00	11:05am

Reported AC: .00 g/210L



Signature of Chemical Analyst

Court CVR



**Analyst**



Intox EC/IR-II: Preventive Maintenance

HARNETT COUNTY DETENTION CENTER 420

Serial Number: 008729      Test Record Number: 2414  
Test Date: 09/24/2020      Test Time: 11:08am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	11:08am
FLO	Pass	11:08am
FC	Pass	11:08am

Temperature Tests

Test	Status	Time
FC1	Pass	11:08am
SRC	Pass	11:08am
DET	Pass	11:08am
BAR	Pass	11:08am
BT	Pass	11:08am

Blank Tests

Test	Status	Time
AIR	Pass	11:09am

Printer Tests

Test	Status	Time
PRNT	Pass	11:09am

CRC Tests

Test	Status	Time
COMP	Pass	11:09am
CAL	Pass	11:09am

Preventive Maintenance  
Status: Pass



**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Harnett Co. Instrument Location Harnett Co. Detention Center  
Instrument Serial No. 008730 Lillington, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 24<sup>th</sup> day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

654  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

HARNETT COUNTY DETENTION CENTER 420

Serial Number: 008730  
Test Date: 09/24/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

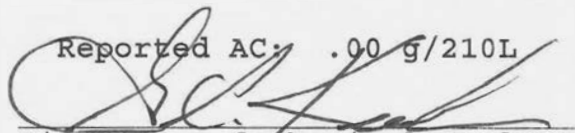
Analyst's Name: Keesler, Grayham C  
Permit Number: 0045-5487  
Effective:  
11/04/2019-11/04/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG007601  
Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	10:57am
AIR BLK	.00	10:57am
ACCY CHK	.08	10:58am
AIR BLK	.00	10:59am
<b>SUB TEST</b>	<b>.00</b>	<b>10:59am</b>
AIR BLK	.00	11:00am
<b>SUB TEST</b>	<b>.00</b>	<b>11:02am</b>
AIR BLK	.00	11:03am

Reported AC: .00 g/210L

  
Signature of Chemical Analyst

Court CVR

  
**Analyst**

**Intox EC/IR-II: Preventive Maintenance**

HARNETT COUNTY DETENTION CENTER 420

Serial Number: 008730      Test Record Number: 3520  
Test Date: 09/24/2020      Test Time: 11:05am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	11:06am
FLO	Pass	11:06am
FC	Pass	11:06am

Temperature Tests

Test	Status	Time
FC1	Pass	11:06am
SRC	Pass	11:06am
DET	Pass	11:06am
BAR	Pass	11:06am
BT	Pass	11:06am

Blank Tests

Test	Status	Time
AIR	Pass	11:06am

Printer Tests

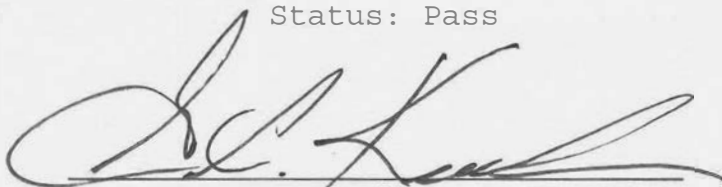
Test	Status	Time
PRNT	Pass	11:07am

CRC Tests

Test	Status	Time
COMP	Pass	11:07am
CAL	Pass	11:07am

Preventive Maintenance

Status: Pass



**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Iredell Instrument Location But Mob, 'ic Unit

Instrument Serial No. 008869

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 4 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Ch. Joy

Signature of Certifying Official

658

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

IREDELL COUNTY BAT MOBILE UNIT 1 480

Serial Number: 008869  
Test Date: 09/04/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: TOWERY, CHAD V  
Permit Number: 26632E  
Effective:  
05/01/2019-05/01/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG902201  
Exp Date: 01/22/2021

Test	g/210L	Time
DIAG	Pass	7:46pm
AIR BLK	.00	7:47pm
ACCY CHK	.07	7:47pm
AIR BLK	.00	7:48pm
<b>SUB TEST</b>	<b>.00</b>	<b>7:49pm</b>
AIR BLK	.00	7:50pm
<b>SUB TEST</b>	<b>.00</b>	<b>7:51pm</b>
AIR BLK	.00	7:52pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**Intox EC/IR-II: Preventive Maintenance**

*IREDELL COUNTY BAT MOBILE UNIT 1 480*

Serial Number: 008869      Test Record Number: 1065  
Test Date: 09/04/2020      Test Time: 7:53pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	7:53pm
FLO	Pass	7:53pm
FC	Pass	7:53pm

Temperature Tests

Test	Status	Time
FC1	Pass	7:53pm
SRC	Pass	7:53pm
DET	Pass	7:53pm
BAR	Pass	7:53pm
BT	Pass	7:53pm

Blank Tests

Test	Status	Time
AIR	Pass	7:54pm


Printer Tests

Test	Status	Time
PRNT	Pass	7:54pm

CRC Tests

Test	Status	Time
COMP	Pass	7:54pm
CAL	Pass	7:54pm

Preventive Maintenance  
Status: Pass



---

**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Iredell Instrument Location Bad Mobile Unit 1

Instrument Serial No. 008898

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 4 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Chris Jones

Signature of Certifying Official

658

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.



**Intox EC/IR-II: Preventive Maintenance**

*IREDELL COUNTY BAT MOBILE UNIT 1 480*

Serial Number: 008898      Test Record Number: 1051  
Test Date: 09/04/2020      Test Time: 7:56pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	7:56pm
FLO	Pass	7:56pm
FC	Pass	7:56pm

Temperature Tests

Test	Status	Time
FC1	Pass	7:56pm
SRC	Pass	7:56pm
DET	Pass	7:56pm
BAR	Pass	7:56pm
BT	Pass	7:56pm

Blank Tests

Test	Status	Time
AIR	Pass	7:57pm


Printer Tests

Test	Status	Time
PRNT	Pass	7:57pm

CRC Tests

Test	Status	Time
COMP	Pass	7:57pm
CAL	Pass	7:57pm

Preventive Maintenance  
Status: Pass



**Analyst**

**Intox EC/IR-II: Subject Test**

IREDELL COUNTY BAT MOBILE UNIT 1 480

Serial Number: 008898  
Test Date: 09/04/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: TOWERY, CHAD V  
Permit Number: 26632E  
Effective:  
05/01/2019-05/01/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG902201  
Exp Date: 01/22/2021

Test	g/210L	Time
DIAG	Pass	7:48pm
AIR BLK	.00	7:49pm
ACCY CHK	.07	7:50pm
AIR BLK	.00	7:51pm
SUB TEST	.00	7:52pm
AIR BLK	.00	7:53pm
SUB TEST	.00	7:54pm
AIR BLK	.00	7:55pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Jackson Instrument Location Jackson Co. Jail  
Instrument Serial No. 008911 Sylva, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 11 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



David R. Auth

Signature of Certifying Official

635

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

JACKSON COUNTY JACKSON COUNTY JAIL 490

Serial Number: 008911  
Test Date: 09/11/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Cutler, Daniel R

Permit Number: 0084-3310

Effective:

07/12/2019-07/12/2021

Officer's Name: NONE,

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG920301


Exp Date: 07/22/2021

Test	g/210L	Time
DIAG	Pass	9:45am
AIR BLK	.00	9:45am
ACCY CHK	.07	9:46am
AIR BLK	.00	9:47am
SUB TEST	.00	9:48am
AIR BLK	.00	9:48am
SUB TEST	.00	9:50am
AIR BLK	.00	9:51am

Reported AC: .00 g/210L

\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

Intox EC/IR-II: Preventive Maintenance

JACKSON COUNTY JACKSON COUNTY JAIL 490

Serial Number: 008911      Test Record Number: 641  
Test Date: 09/11/2020      Test Time: 9:51am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	9:52am
FLO	Pass	9:52am
FC	Pass	9:52am

Temperature Tests

Test	Status	Time
FC1	Pass	9:52am
SRC	Pass	9:52am
DET	Pass	9:52am
BAR	Pass	9:52am
BT	Pass	9:52am

Blank Tests

Test	Status	Time
AIR	Pass	9:53am


Printer Tests

Test	Status	Time
PRNT	Pass	9:53am

CRC Tests

Test	Status	Time
COMP	Pass	9:53am
CAL	Pass	9:53am

Preventive Maintenance  
Status: Pass



Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County JOHNSTON Instrument Location CLAYTON POLICE DEPT.  
Instrument Serial No. 008658 CLAYTON, N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 1<sup>ST</sup> day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Signature of Certifying Official

667

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

JOHNSTON COUNTY CLAYTON PD 500

Serial Number: 008658  
Test Date: 09/01/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Galloway, Charles L  
Permit Number: 0023-9771  
Effective:  
02/17/2020-02/17/2022

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test


Lot Number: AG007601  
Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	12:43pm
AIR BLK	.00	12:44pm
ACCY CHK	.08	12:44pm
AIR BLK	.00	12:45pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:46pm</b>
AIR BLK	.00	12:47pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:49pm</b>
AIR BLK	.00	12:50pm

Reported AC: .00 g/210L

Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**Intox EC/IR-II: Preventive Maintenance**

JOHNSTON COUNTY CLAYTON PD 500

Serial Number: 008658      Test Record Number: 1641  
Test Date: 09/01/2020      Test Time: 12:59pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	1:00pm
FLO	Pass	1:00pm
FC	Pass	1:00pm

Temperature Tests

Test	Status	Time
FC1	Pass	1:00pm
SRC	Pass	1:00pm
DET	Pass	1:00pm
BAR	Pass	1:00pm
BT	Pass	1:00pm

Blank Tests

Test	Status	Time
AIR	Pass	1:01pm

Printer Tests

Test	Status	Time
PRNT	Pass	1:01pm

CRC Tests

Test	Status	Time
COMP	Pass	1:01pm
CAL	Pass	1:01pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
**Analyst**



DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Johnston Co. Instrument Location Benson Police Dept.  
Instrument Serial No. 008885 BENSON NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 2nd day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

654  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

JOHNSTON COUNTY BENSON PD 500

Serial Number: 008885  
Test Date: 09/02/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Keesler, Grayham C  
Permit Number: 0045-5487  
Effective:  
11/04/2019-11/04/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG911501  
Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	1:47pm
AIR BLK	.00	1:48pm
ACCY CHK	.08	1:48pm
AIR BLK	.00	1:49pm
SUB TEST	.00	1:49pm
AIR BLK	.00	1:50pm
SUB TEST	.00	1:52pm
AIR BLK	.00	1:53pm

Reported AC: .00/g/210L

  
Signature of Chemical Analyst

Court CVR

  
Analyst

This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007

Intox EC/IR-II: Preventive Maintenance

JOHNSTON COUNTY BENSON PD 500

Serial Number: 008885      Test Record Number: 596  
Test Date: 09/02/2020      Test Time: 1:54pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	1:54pm
FLO	Pass	1:54pm
FC	Pass	1:54pm

Temperature Tests

Test	Status	Time
FC1	Pass	1:54pm
SRC	Pass	1:54pm
DET	Pass	1:54pm
BAR	Pass	1:54pm
BT	Pass	1:54pm

Blank Tests

Test	Status	Time
AIR	Pass	1:55pm

Printer Tests

Test	Status	Time
PRNT	Pass	1:55pm

CRC Tests

Test	Status	Time
COMP	Pass	1:55pm
CAL	Pass	1:55pm

Preventive Maintenance  
Status: Pass



**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Johnston Co. Instrument Location Johnston Co. Detention Center  
Instrument Serial No. 008810 Smithfield, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 22<sup>nd</sup> day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Handwritten Signature]  
Signature of Certifying Official

654  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

JOHNSTON COUNTY DETENTION CENTER 500

Serial Number: 008810  
Test Date: 09/22/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Keesler, Grayham C

Permit Number: 0045-5487

Effective:

11/04/2019-11/04/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG007601

Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	1:11pm
AIR BLK	.00	1:12pm
ACCY CHK	.08	1:12pm
AIR BLK	.00	1:13pm
<b>SUB TEST</b>	<b>.00</b>	<b>1:14pm</b>
AIR BLK	.00	1:15pm
<b>SUB TEST</b>	<b>.00</b>	<b>1:16pm</b>
AIR BLK	.00	1:17pm

Reported AC: .00 g/210L

  
Signature of Chemical Analyst

Court CVR

  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

Intox EC/IR-II: Preventive Maintenance

JOHNSTON COUNTY DETENTION CENTER 500

Serial Number: 008810      Test Record Number: 4246  
Test Date: 09/22/2020      Test Time: 1:18pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	1:18pm
FLO	Pass	1:18pm
FC	Pass	1:18pm

Temperature Tests

Test	Status	Time
FC1	Pass	1:18pm
SRC	Pass	1:18pm
DET	Pass	1:18pm
BAR	Pass	1:18pm
BT	Pass	1:18pm

Blank Tests

Test	Status	Time
AIR	Pass	1:19pm

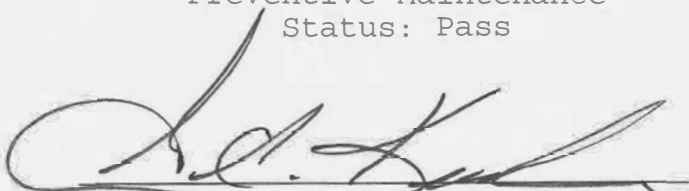
Printer Tests

Test	Status	Time
PRNT	Pass	1:19pm

CRC Tests

Test	Status	Time
COMP	Pass	1:19pm
CAL	Pass	1:19pm

Preventive Maintenance  
Status: Pass



**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Johnston Co. Instrument Location Johnston Co. Detention Center  
Instrument Serial No. 008846 Smithfield, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced With serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 22<sup>nd</sup> day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]

Signature of Certifying Official

654

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

JOHNSTON COUNTY DETENTION CENTER 500

Serial Number: 008846  
Test Date: 09/22/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Keesler, Grayham C  
Permit Number: 0045-5487  
Effective:  
11/04/2019-11/04/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG934001  
Exp Date: 12/06/2021

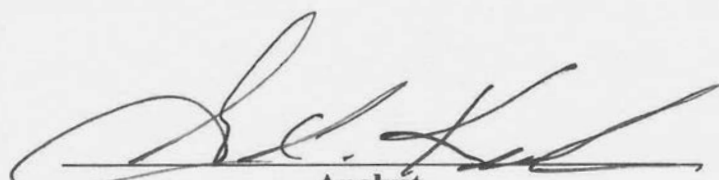
Test	g/210L	Time
DIAG	Pass	1:06pm
AIR BLK	.00	1:07pm
ACCY CHK	.07	1:07pm
AIR BLK	.00	1:08pm
<b>SUB TEST</b>	<b>.00</b>	<b>1:09pm</b>
AIR BLK	.00	1:10pm
<b>SUB TEST</b>	<b>.00</b>	<b>1:12pm</b>
AIR BLK	.00	1:12pm

Recorded AC: .00 g/210L



Signature of Chemical Analyst

Court CVR



**Analyst**



Intox EC/IR-II: Preventive Maintenance

JOHNSTON COUNTY DETENTION CENTER 500

Serial Number: 008846      Test Record Number: 5239  
Test Date: 09/22/2020      Test Time: 1:13pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	1:13pm
FLO	Pass	1:13pm
FC	Pass	1:14pm

Temperature Tests

Test	Status	Time
FC1	Pass	1:14pm
SRC	Pass	1:14pm
DET	Pass	1:14pm
BAR	Pass	1:14pm
BT	Pass	1:14pm

Blank Tests

Test	Status	Time
AIR	Pass	1:14pm

Printer Tests

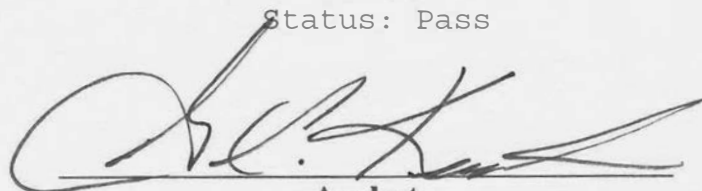
Test	Status	Time
PRNT	Pass	1:14pm

CRC Tests

Test	Status	Time
COMP	Pass	1:14pm
CAL	Pass	1:14pm

Preventive Maintenance

Status: Pass



**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County LEE Instrument Location LEE CO. DETENTION CENTER  
Instrument Serial No. 008645 SANFORD, N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 22<sup>ND</sup> day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



*[Handwritten Signature]*

Signature of Certifying Official

1607

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

LEE COUNTY DETENTION CENTER 520

Serial Number: 008645  
Test Date: 09/22/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Galloway, Charles L

Permit Number: 0023-9771

Effective:

02/17/2020-02/17/2022

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG911501

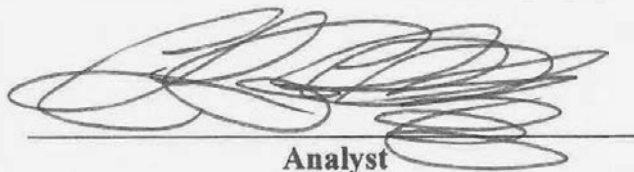
Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	10:18am
AIR BLK	.00	10:19am
ACCY CHK	.08	10:19am
AIR BLK	.00	10:20am
<b>SUB TEST</b>	<b>.00</b>	<b>10:21am</b>
AIR BLK	.00	10:22am
<b>SUB TEST</b>	<b>.00</b>	<b>10:23am</b>
AIR BLK	.00	10:24am

Reported AC: .00 g/210L

Signature of Chemical Analyst

Court CVR



Analyst

Intox EC/IR-II: Preventive Maintenance

LEE COUNTY DETENTION CENTER 520

Serial Number: 008645      Test Record Number: 2047  
Test Date: 09/22/2020      Test Time: 10:26am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	10:26am
FLO	Pass	10:26am
FC	Pass	10:26am

Temperature Tests

Test	Status	Time
FC1	Pass	10:26am
SRC	Pass	10:26am
DET	Pass	10:26am
BAR	Pass	10:26am
BT	Pass	10:26am

Blank Tests

Test	Status	Time
AIR	Pass	10:27am

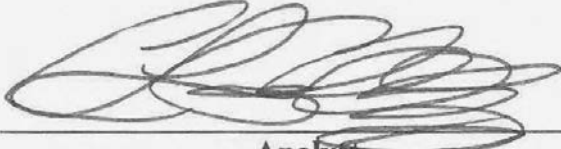
Printer Tests

Test	Status	Time
PRNT	Pass	10:27am

CRC Tests

Test	Status	Time
COMP	Pass	10:27am
CAL	Pass	10:27am

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County LEE Instrument Location SANFORD POLICE DEPT.  
Instrument Serial No. 008867 SANFORD, N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 22<sup>ND</sup> day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

667  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

LEE COUNTY SANFORD POLICE DEPT 520

Serial Number: 008867  
Test Date: 09/22/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Galloway, Charles L

Permit Number: 0023-9771

Effective:

02/17/2020-02/17/2022

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG934001

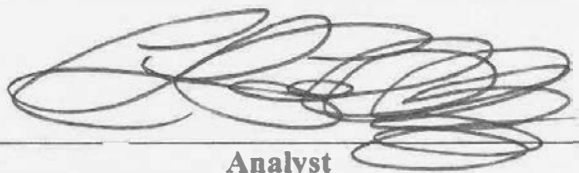
Exp Date: 12/06/2021

Test	g/210L	Time
DIAG	Pass	9:22am
AIR BLK	.00	9:22am
ACCY CHK	.08	9:23am
AIR BLK	.00	9:24am
<b>SUB TEST</b>	<b>.00</b>	<b>9:25am</b>
AIR BLK	.00	9:26am
<b>SUB TEST</b>	<b>.00</b>	<b>9:27am</b>
AIR BLK	.00	9:28am

Reported AC: .00 g/210L

~~Signature of Chemical Analyst~~

Court CVR

  
Analyst

**Intox EC/IR-II: Preventive Maintenance**

LEE COUNTY SANFORD POLICE DEPT 520

Serial Number: 008867      Test Record Number: 1182  
Test Date: 09/22/2020      Test Time: 9:31am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	9:31am
FLO	Pass	9:31am
FC	Pass	9:31am

Temperature Tests

Test	Status	Time
FC1	Pass	9:31am
SRC	Pass	9:31am
DET	Pass	9:31am
BAR	Pass	9:31am
BT	Pass	9:31am

Blank Tests

Test	Status	Time
AIR	Pass	9:32am

Printer Tests

Test	Status	Time
PRNT	Pass	9:32am

CRC Tests

Test	Status	Time
COMP	Pass	9:32am
CAL	Pass	9:32am

Preventive Maintenance  
Status: Pass



Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Lenoir Instrument Location KINSTON P.D.

Instrument Serial No. 008624 205 E. King St., KINSTON N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 11<sup>th</sup> day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Linda Reese  
Signature of Certifying Official

647  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.



**Intox EC/IR-II: Subject Test**

LENOIR COUNTY KINSTON PD 530

Serial Number: 008624  
Test Date: 09/11/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Keesler, Linda A  
Permit Number: 0045-5468  
Effective:  
07/08/2019-07/08/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG933703  
Exp Date: 12/03/2021

Test	g/210L	Time
DIAG	Pass	11:40am
AIR BLK	.00	11:41am
ACCY CHK	.07	11:42am
AIR BLK	.00	11:43am
SUB TEST	.00	11:43am
AIR BLK	.00	11:44am
SUB TEST	.00	11:46am
AIR BLK	.00	11:46am

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

LENOIR COUNTY KINSTON PD 530

Serial Number: 008624      Test Record Number: 1883  
Test Date: 09/11/2020      Test Time: 11:48am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	11:49am
FLO	Pass	11:49am
FC	Pass	11:49am

Temperature Tests

Test	Status	Time
FC1	Pass	11:49am
SRC	Pass	11:49am
DET	Pass	11:49am
BAR	Pass	11:49am
BT	Pass	11:49am

Blank Tests

Test	Status	Time
AIR	Pass	11:49am

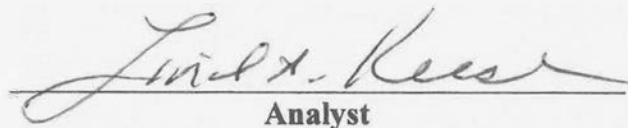
Printer Tests

Test	Status	Time
PRNT	Pass	11:49am

CRC Tests

Test	Status	Time
COMP	Pass	11:50am
CAL	Pass	11:50am

Preventive Maintenance  
Status: Pass

  
**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County LENOIR Instrument Location Lenoir Co. S.O.  
Instrument Serial No. 008639 130 Queen St. Kinston, N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 11th day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



James Heese 647  
Signature of Certifying Official Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

LENOIR COUNTY LENOIR CO SO 530

Serial Number: 008639  
Test Date: 09/11/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Keesler, Linda A  
Permit Number: 0045-5468  
Effective:  
07/08/2019-07/08/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG933703  
Exp Date: 12/03/2021

Test	g/210L	Time
DIAG	Pass	11:02am
AIR BLK	.00	11:02am
ACCY CHK	.07	11:03am
AIR BLK	.00	11:04am
SUB TEST	.00	11:04am
AIR BLK	.00	11:05am
SUB TEST	.00	11:07am
AIR BLK	.00	11:08am

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

LENOIR COUNTY LENOIR CO SO 530

Serial Number: 008639      Test Record Number: 3467  
Test Date: 09/11/2020      Test Time: 11:08am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	11:08am
FLO	Pass	11:08am
FC	Pass	11:08am

Temperature Tests

Test	Status	Time
FC1	Pass	11:09am
SRC	Pass	11:09am
DET	Pass	11:09am
BAR	Pass	11:09am
BT	Pass	11:09am

Blank Tests

Test	Status	Time
AIR	Pass	11:09am

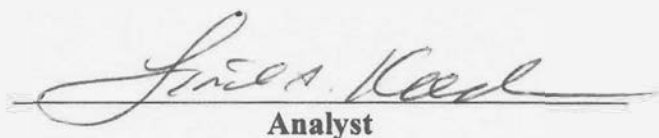
Printer Tests

Test	Status	Time
PRNT	Pass	11:09am

CRC Tests

Test	Status	Time
COMP	Pass	11:09am
CAL	Pass	11:09am

Preventive Maintenance  
Status: Pass

  
**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Mecklenburg Instrument Location BAT mobile unit 12  
Instrument Serial No. 008788 Charlotte

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 19 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

665  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

MECKLENBURG COUNTY BAT MOBILE UNIT 12  
590

Serial Number: 008788  
Test Date: 09/19/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Anderson, Mark G

Permit Number: 0013-1517

Effective:

09/10/2020-09/10/2022

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS


Test Type: Breath Test

Lot Number: AG911506

Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	11:43pm
AIR BLK	.00	11:44pm
ACCY CHK	.08	11:44pm
AIR BLK	.00	11:45pm
SUB TEST	.00	11:46pm
AIR BLK	.00	11:47pm
SUB TEST	.00	11:49pm
AIR BLK	.00	11:49pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007

Intox EC/IR-II: Preventive Maintenance

MECKLENBURG COUNTY BAT MOBILE UNIT 12 590

Serial Number: 008788      Test Record Number: 1583  
Test Date: 09/19/2020      Test Time: 11:51pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	11:51pm
FLO	Pass	11:51pm
FC	Pass	11:52pm

Temperature Tests

Test	Status	Time
FC1	Pass	11:52pm
SRC	Pass	11:52pm
DET	Pass	11:52pm
BAR	Pass	11:52pm
BT	Pass	11:52pm

Blank Tests

Test	Status	Time
AIR	Pass	11:52pm

Printer Tests

Test	Status	Time
PRNT	Pass	11:52pm

CRC Tests

Test	Status	Time
COMP	Pass	11:52pm
CAL	Pass	11:52pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
Analyst



DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Mecklenburg Instrument Location BAT mobile Unit 12

Instrument Serial No. 008600 Charlotte

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 19 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Signature of Certifying Official

665

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

MECKLENBURG COUNTY BAT MOBILE 12 590

Serial Number: 008600  
Test Date: 09/19/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NCNE

Analyst's Name: Anderson, Mark G

Permit Number: 0013-1517

Effective:

09/10/2020-09/10/2022

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS


Test Type: Breath Test

Lot Number: AG919902

Exp Date: 07/18/2021

Test	g/210L	Time
DIAG	Pass	9:45pm
AIR BLK	.00	9:46pm
ACCY CHK	.08	9:47pm
AIR BLK	.00	9:48pm
SUB TEST	.00	9:49pm
AIR BLK	.00	9:50pm
SUB TEST	.00	9:52pm
AIR BLK	.00	9:53pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007

Intox EC/IR-II: Preventive Maintenance

MECKLENBURG COUNTY BAT MOBILE 12 590

Serial Number: 008600      Test Record Number: 2002  
Test Date: 09/19/2020      Test Time: 10:00pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	10:00pm
FLO	Pass	10:00pm
FC	Pass	10:01pm

Temperature Tests

Test	Status	Time
FC1	Pass	10:01pm
SRC	Pass	10:01pm
DET	Pass	10:01pm
BAR	Pass	10:01pm
BT	Pass	10:01pm

Blank Tests

Test	Status	Time
AIR	Pass	10:01pm

Printer Tests

Test	Status	Time
PRNT	Pass	10:01pm

CRC Tests

Test	Status	Time
COMP	Pass	10:02pm
CAL	Pass	10:02pm

Preventive Maintenance  
Status: Pass



Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)

County Mecklenburg Instrument Location BAT Mobile unit 12  
Instrument Serial No. 008678 Charlotte

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 19 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

665  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

MECKLENBURG COUNTY BAT MOBILE 12 590

Serial Number: 008698  
Test Date: 09/19/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Anderson, Mark G  
Permit Number: 0013-1517  
Effective:  
09/10/2020-09/10/2022

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG007601  
Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	9:29pm
AIR BLK	.00	9:30pm
ACCY CHK	.08	9:31pm
AIR BLK	.00	9:32pm
SUB TEST	.00	9:33pm
AIR BLK	.00	9:35pm
SUB TEST	.00	9:36pm
AIR BLK	.00	9:37pm

Reported AC: 00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

Intox EC/IR-II: Preventive Maintenance

MECKLENBURG COUNTY BAT MOBILE 12 590

Serial Number: 008698      Test Record Number: 1587  
Test Date: 09/19/2020      Test Time: 9:40pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	9:40pm
FLO	Pass	9:40pm
FC	Pass	9:40pm

Temperature Tests

Test	Status	Time
FC1	Pass	9:40pm
SRC	Pass	9:40pm
DET	Pass	9:40pm
BAR	Pass	9:40pm
BT	Pass	9:40pm

Blank Tests

Test	Status	Time
AIR	Pass	9:41pm

Printer Tests

Test	Status	Time
PRNT	Pass	9:41pm

CRC Tests

Test	Status	Time
COMP	Pass	9:41pm
CAL	Pass	9:41pm

Preventive Maintenance  
Status: Pass



**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Mecklenburg Instrument Location BAT Mobile Unit 12

Instrument Serial No. 008788 Charlotte

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 18 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

665  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

MECKLENBURG COUNTY BAT MOBILE UNIT 12  
590

Serial Number: 008788  
Test Date: 09/18/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Anderson, Mark G  
Permit Number: 0013-1517  
Effective:  
09/10/2020-09/10/2022

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG911506  
Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	8:32pm
AIR BLK	.00	8:33pm
ACCY CHK	.08	8:34pm
AIR BLK	.00	8:35pm
SUB TEST	.00	8:36pm
AIR BLK	.00	8:37pm
SUB TEST	.00	8:39pm
AIR BLK	.00	8:39pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst



Intox EC/IR-II: Preventive Maintenance

MECKLENBURG COUNTY BAT MOBILE UNIT 12 590

Serial Number: 008788      Test Record Number: 1579  
Test Date: 09/18/2020      Test Time: 8:41pm EDT

System Check: Passed

Baseline Tests

Test	Status	Time
IR	Pass	8:41pm
FLO	Pass	8:41pm
FC	Pass	8:41pm

Temperature Tests

Test	Status	Time
FC1	Pass	8:41pm
SRC	Pass	8:41pm
DET	Pass	8:41pm
BAR	Pass	8:41pm
BT	Pass	8:41pm

Blank Tests

Test	Status	Time
AIR	Pass	8:42pm


Printer Tests

Test	Status	Time
PRNT	Pass	8:42pm

CRC Tests

Test	Status	Time
COMP	Pass	8:42pm
CAL	Pass	8:42pm

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Montgomery Instrument Location BAT Mobile unit #5  
Instrument Serial No. 008616 WRC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 6 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

664  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

MONTGOMEY COUNTY BAT MOBILE UNIT 5 610

Serial Number: 008616

Test Date: 09/06/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Todd, Shane C

Permit Number: 0035-4789

Effective:

06/08/2020-06/08/2022

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

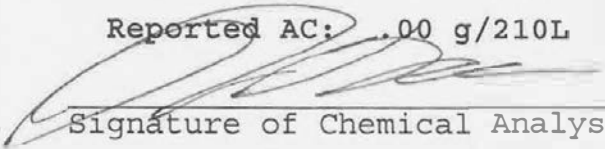
Test Type: Breath Test

Lot Number: AG933703

Exp Date: 03/12/2021

Test	g/210L	Time
DIAG	Pass	1:34pm
AIR BLK	.00	1:35pm
ACCY CHK	.07	1:36pm
AIR BLK	.00	1:36pm
SUB TEST	.00	1:37pm
AIR BLK	.00	1:38pm
SUB TEST	.00	1:40pm
AIR BLK	.00	1:40pm

Reported AC: .00 g/210L

  
Signature of Chemical Analyst

Court CVR

  
Analyst

This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007

Intox EC/IR-II: Preventive Maintenance

MONTGOMEY COUNTY BAT MOBILE UNIT 5 610

Serial Number: 008616      Test Record Number: 2566  
Test Date: 09/06/2020      Test Time: 1:44pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	1:45pm
FLO	Pass	1:45pm
FC	Pass	1:45pm

Temperature Tests

Test	Status	Time
FC1	Pass	1:45pm
SRC	Pass	1:45pm
DET	Pass	1:45pm
BAR	Pass	1:45pm
BT	Pass	1:45pm

Blank Tests

Test	Status	Time
AIR	Pass	1:45pm

Printer Tests

Test	Status	Time
PRNT	Pass	1:46pm

CRC Tests

Test	Status	Time
COMP	Pass	1:46pm
CAL	Pass	1:46pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
**Analyst**

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

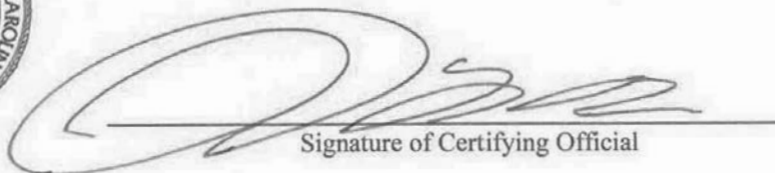
County Montgomery Instrument Location BAT Mobile Units  
Instrument Serial No. 008647 Discove PD

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 8 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



  
Signature of Certifying Official

664  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

MONTGOMERY COUNTY BAT MOBILE UNIT 5  
610

Serial Number: 008647

Test Date: 09 08/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Todd, Shane C

Permit Number: 0035-4789

Effective:

06/08/2020-06/08/2022

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

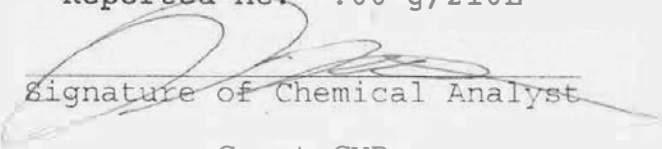
Test Type: Breath Test

Lot Number: AG933703

Exp Date: 12/03/2021

Test	g/210L	Time
DIAG	Pass	7:22pm
AIR BLK	.00	7:23pm
ACCY CHK	.07	7:24pm
AIR BLK	.00	7:25pm
<b>SUB TEST</b>	<b>.00</b>	<b>7:25pm</b>
AIR BLK	.00	7:26pm
<b>SUB TEST</b>	<b>.00</b>	<b>7:28pm</b>
AIR BLK	.00	7:28pm

Reported AC: .00 g/210L

  
Signature of Chemical Analyst

Court CVR

  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

**Intox EC/IR-II: Preventive Maintenance**

MONTGOMERY COUNTY BAT MOBILE UNIT 5 610  
Serial Number: 008647      Test Record Number: 2558  
Test Date: 09/08/2020      Test Time: 7:30pm EDT  
System Check: Passed

**Baseline Tests**

Test	Status	Time
IR	Pass	7:31pm
FLO	Pass	7:31pm
FC	Pass	7:31pm

**Temperature Tests**

Test	Status	Time
FC1	Pass	7:31pm
SRC	Pass	7:31pm
DET	Pass	7:31pm
BAR	Pass	7:31pm
BT	Pass	7:31pm

**Blank Tests**

Test	Status	Time
AIR	Pass	7:31pm

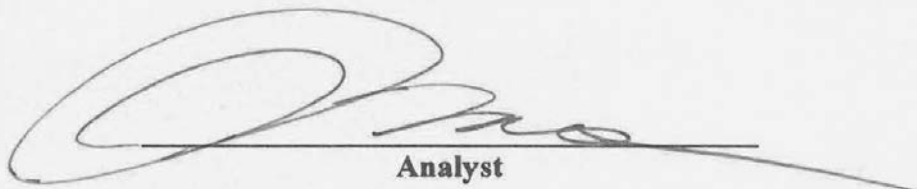
**Printer Tests**

Test	Status	Time
PRNT	Pass	7:32pm

**CRC Tests**

Test	Status	Time
COMP	Pass	7:32pm
CAL	Pass	7:32pm

Preventive Maintenance  
Status: Pass



**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Montgomery Instrument Location BAT Mobile Unit #5  
Instrument Serial No. 008647 WRC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 6 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



  
Signature of Certifying Official

664  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.



**Intox EC/IR-II: Subject Test**

MONTGOMEY COUNTY BAT MOBILE UNIT 5 610

Serial Number: 008647

Test Date: 09/06/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Todd, Shane C

Permit Number: 0035-4789

Effective:

06/08/2020-06/08/2022

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

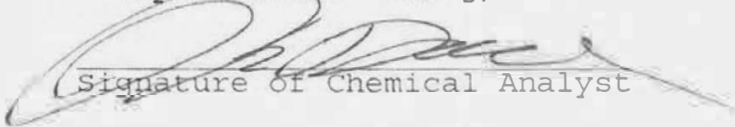
Test Type: Breath Test

Lot Number: AG933703

Exp Date: 12/03/2021

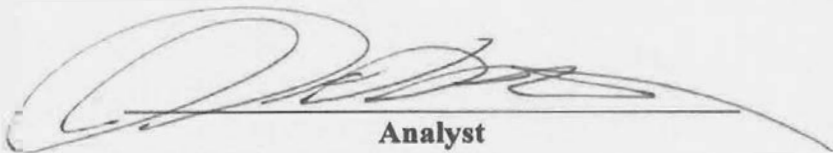
Test	g/210L	Time
DIAG	Pass	1:33pm
AIR BLK	.00	1:34pm
ACCY CHK	.07	1:35pm
AIR BLK	.00	1:36pm
SUB TEST	.00	1:36pm
AIR BLK	.00	1:37pm
SUB TEST	.00	1:39pm
AIR BLK	.00	1:40pm

Reported AC: .00 g/210L



Signature of Chemical Analyst

Court CVR



Analyst

**Intox EC/IR-II: Preventive Maintenance**

MONTGOMEY COUNTY BAT MOBILE UNIT 5 610  
Serial Number: 008647      Test Record Number: 2555  
Test Date: 09/06/2020      Test Time: 1:42pm EDT  
System Check: Passed

**Baseline Tests**

Test	Status	Time
IR	Pass	1:42pm
FLO	Pass	1:42pm
FC	Pass	1:43pm

**Temperature Tests**

Test	Status	Time
FC1	Pass	1:43pm
SRC	Pass	1:43pm
DET	Pass	1:43pm
BAR	Pass	1:43pm
BT	Pass	1:43pm

**Blank Tests**

Test	Status	Time
AIR	Pass	1:43pm

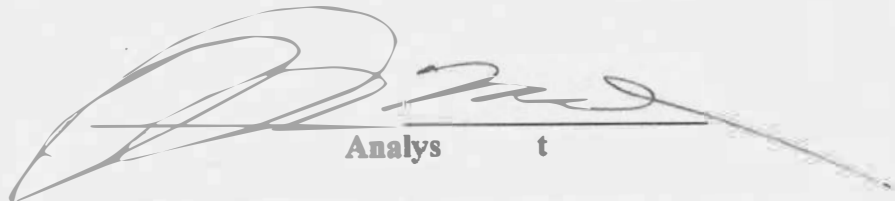
**Printer Tests**

Test	Status	Time
PRNT	Pass	1:43pm

**CRC Tests**

Test	Status	Time
COMP	Pass	1:43pm
CAL	Pass	1:43pm

Preventive Maintenance  
Status: Pass



Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County NASH Instrument Location NASH Co. S.O. Detention Ctr  
Instrument Serial No. 008630 222. S. Washington ST  
Nashville, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 8 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Stokes Barnes

Signature of Certifying Official

662

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

NASH COUNTY NASH DETENTION CTR 630

Serial Number: 008630  
Test Date: 09/08/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE


Analyst's Name: BARNES, STOKES  
Permit Number: 11434E  
Effective:  
04/01/2019-04/01/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG007601  
Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	12:47pm
AIR BLK	.00	12:48pm
ACCY CHK	.08	12:48pm
AIR BLK	.00	12:49pm
SUB TEST	.00	12:50pm
AIR BLK	.00	12:51pm
SUB TEST	.00	12:52pm
AIR BLK	.00	12:53pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

NASH COUNTY NASH DETENTION CTR 630

Serial Number: 008630      Test Record Number: 4860  
Test Date: 09/08/2020      Test Time: 12:54pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	12:54pm
FLO	Pass	12:54pm
FC	Pass	12:54pm

Temperature Tests

Test	Status	Time
FC1	Pass	12:54pm
SRC	Pass	12:54pm
DET	Pass	12:54pm
BAR	Pass	12:54pm
BT	Pass	12:54pm

Blank Tests

Test	Status	Time
AIR	Pass	12:55pm

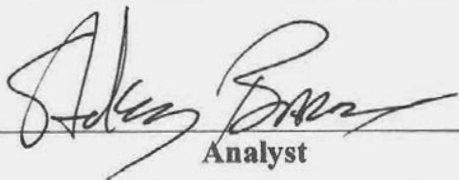
Printer Tests

Test	Status	Time
PRNT	Pass	12:55pm

CRC Tests

Test	Status	Time
COMP	Pass	12:55pm
CAL	Pass	12:55pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Onslow Instrument Location BAT Mobile Unit 12

Instrument Serial No. 008788 Jacksonville

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 3 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

665  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

ONslow COUNTY BAT MOBILE UNIT 12 660

Serial Number: 008788  
Test Date: 09/03/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Anderson, Mark G  
Permit Number: 0013-1517  
Effective:  
09/23/2019-09/23/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test


Lot Number: AG911506  
Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	9:16pm
AIR BLK	.00	9:17pm
ACCY CHK	.07	9:17pm
AIR BLK	.00	9:18pm
<b>SUB TEST</b>	<b>.00</b>	<b>9:20pm</b>
AIR BLK	.00	9:21pm
<b>SUB TEST</b>	<b>.00</b>	<b>9:22pm</b>
AIR BLK	.00	9:23pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of ~~Chemical~~ Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

ONslow COUNTY BAT MOBILE UNIT 12 660

Serial Number: 008788      Test Record Number: 1565  
Test Date: 09/03/2020      Test Time: 9:25pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	9:25pm
FLO	Pass	9:25pm
FC	Pass	9:25pm

Temperature Tests

Test	Status	Time
FC1	Pass	9:25pm
SRC	Pass	9:25pm
DET	Pass	9:25pm
BAR	Pass	9:25pm
BT	Pass	9:25pm

Blank Tests

Test	Status	Time
AIR	Pass	9:26pm

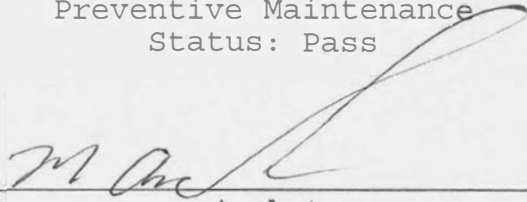
Printer Tests

Test	Status	Time
PRNT	Pass	9:26pm

CRC Tests

Test	Status	Time
COMP	Pass	9:26pm
CAL	Pass	9:26pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
**Analyst**



DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Onslow Instrument Location BAT Mobile Unit 12

Instrument Serial No. 008698 Sneads Ferry

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 4 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

665  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

ONSLOW COUNTY BAT MOBILE 12 660

Serial Number: 008698  
Test Date: 09/04/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Anderson, Mark G  
Permit Number: 0013-1517  
Effective:  
09/23/2019-09/23/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test


Lot Number: AG007601  
Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	11:09pm
AIR BLK	.00	11:10pm
ACCY CHK	.08	11:11pm
AIR BLK	.00	11:11pm
<b>SUB TEST</b>	<b>.00</b>	<b>11:12pm</b>
AIR BLK	.00	11:13pm
<b>SUB TEST</b>	<b>.00</b>	<b>11:15pm</b>
AIR BLK	.00	11:16pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

# Intox EC/IR-II: Preventive Maintenance

ONSLOW COUNTY BAT MOBILE 12 660

Serial Number: 008698      Test Record Number: 1579  
Test Date: 09/04/2020      Test Time: 11:20pm EDT

System Check: *Passed*

## Baseline Tests

Test	Status	Time
IR	Pass	11:21pm
FLO	Pass	11:21pm
FC	Pass	11:21pm

## Temperature Tests

Test	Status	Time
FC1	Pass	11:21pm
SRC	Pass	11:21pm
DET	Pass	11:21pm
BAR	Pass	11:21pm
BT	Pass	11:21pm

## Blank Tests

Test	Status	Time
AIR	Pass	11:21pm

## Printer Tests

Test	Status	Time
PRNT	Pass	11:21pm

## CRC Tests

Test	Status	Time
COMP	Pass	11:22pm
CAL	Pass	11:22pm

Preventive Maintenance  
Status: Pass



Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Onslow Instrument Location BAT mobile unit 12

Instrument Serial No. 008698 Hubert

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 2 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Man

Signature of Certifying Official

665

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

ON SLOW COUNTY BAT MOBILE 12 660

Serial Number: 008698  
Test Date: 09/02/2020

Citation Number: M0000000-0  
Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Anderson, Mark G

Permit Number: 0013-1517

Effective:

09/23/2019-09/23/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG007601

Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	10:04pm
AIR BLK	.00	10:05pm
ACCY CHK	.07	10:06pm
AIR BLK	.00	10:07pm
<b>SUB TEST</b>	<b>.00</b>	<b>10:07pm</b>
AIR BLK	.00	10:08pm
<b>SUB TEST</b>	<b>.00</b>	<b>10:10pm</b>
AIR BLK	.00	10:11pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

**Intox EC/IR-II: Preventive Maintenance**

ONslow COUNTY BAT MOBILE 12 660

Serial Number: 008698      Test Record Number: 1572  
Test Date: 09/02/2020      Test Time: 10:12pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	10:12pm
FLO	Pass	10:12pm
FC	Pass	10:12pm

Temperature Tests

Test	Status	Time
FC1	Pass	10:12pm
SRC	Pass	10:12pm
DET	Pass	10:12pm
BAR	Pass	10:12pm
BT	Pass	10:12pm

Blank Tests

Test	Status	Time
AIR	Pass	10:13pm

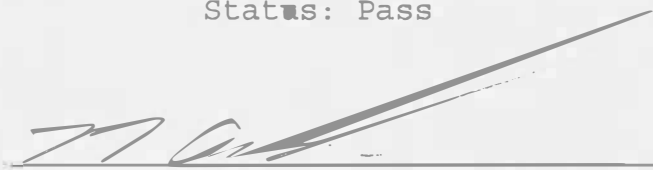
Printer Tests

Test	Status	Time
PRNT	Pass	10:13pm

CRC Tests

Test	Status	Time
COMP	Pass	10:13pm
CAL	Pass	10:13pm

Preventive Maintenance  
Status: Pass



**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County onslow Instrument Location BAT mobile unit 12

Instrument Serial No. 008788 Hubert

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 2 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

665  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

ONSLOW COUNTY BAT MOBILE UNIT 12 660

Serial Number: 008788  
Test Date: 09/02/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Anderson, Mark G

Permit Number: 0013-1517

Effective:

09/23/2019-09/23/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG911506

Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	10:50pm
AIR BLK	.00	10:51pm
ACCY CHK	.08	10:51pm
AIR BLK	.00	10:52pm
<b>SUB TEST</b>	<b>.00</b>	<b>10:53pm</b>
AIR BLK	.00	10:54pm
<b>SUB TEST</b>	<b>.00</b>	<b>10:55pm</b>
AIR BLK	.00	10:56pm

Reported AC: .00 g/210L

  
Signature of Chemical Analyst

Court CVR

  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**



**Intox EC/IR-II: Preventive Maintenance**

ONSLOW COUNTY BAT MOBILE UNIT 12 660

Serial Number: 008788      Test Record Number: 1562  
Test Date: 09/02/2020      Test Time: 10:57pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	10:58pm
FLO	Pass	10:58pm
FC	Pass	10:58pm

Temperature Tests

Test	Status	Time
FC1	Pass	10:58pm
SRC	Pass	10:58pm
DET	Pass	10:58pm
BAR	Pass	10:58pm
BT	Pass	10:58pm

Blank Tests

Test	Status	Time
AIR	Pass	10:58pm

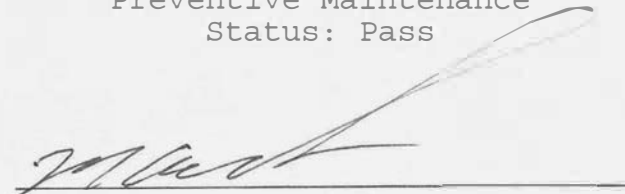
Printer Tests

Test	Status	Time
PRNT	Pass	10:58pm

CRC Tests

Test	Status	Time
COMP	Pass	10:59pm
CAL	Pass	10:59pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County ORANGE Instrument Location Hillsborough PD

Instrument Serial No. 008799 127 N. Churton St Hillsborough, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 9 day of September, 2020, the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]

Signature of Certifying Official

642

Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

ORANGE COUNTY HILLSBOROUGH PD 670

Serial Number: 008799  
Test Date: 09/09/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE


Analyst's Name: BARNES, STOKES  
Permit Number: 11434E  
Effective:  
04/01/2019-04/01/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG018202  
Exp Date: 06/30/2022

Test	g/210L	Time
DIAG	Pass	12:18pm
AIR BLK	.00	12:18pm
ACCY CHK	.08	12:19pm
AIR BLK	.00	12:20pm
SUB TEST	.00	12:21pm
AIR BLK	.00	12:21pm
SUB TEST	.00	12:23pm
AIR BLK	.00	12:24pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

ORANGE COUNTY HILLSBOROUGH PD 670

Serial Number: 008799      Test Record Number: 3302  
Test Date: 09/09/2020      Test Time: 12:24pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	12:24pm
FLO	Pass	12:24pm
FC	Pass	12:24pm

Temperature Tests

Test	Status	Time
FC1	Pass	12:25pm
SRC	Pass	12:25pm
DET	Pass	12:25pm
BAR	Pass	12:25pm
BT	Pass	12:25pm

Blank Tests

Test	Status	Time
AIR	Pass	12:25pm

Printer Tests

Test	Status	Time
PRNT	Pass	12:25pm

CRC Tests

Test	Status	Time
COMP	Pass	12:25pm
CAL	Pass	12:25pm

Preventive Maintenance  
Status: Pass



Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County ORANGE Instrument Location Chapel Hill PD

Instrument Serial No. 008839 828 Martin Luther King Jr Blvd  
Chapel Hill, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 3 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

642  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

ORANGE COUNTY CHAPEL HILL PD 670

Serial Number: 008839  
Test Date: 09/03/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: BARNES, STOKES

Permit Number: 11434E

Effective:

04/01/2019-04/01/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

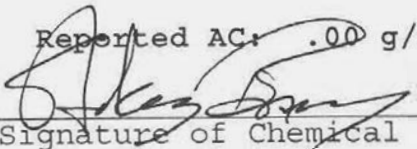
Test Type: Breath Test

Lot Number: AG007601

Exp Date: 03/16/2022

Test	g/210L	Time
DIAG	Pass	9:48am
AIR BLK	.00	9:49am
ACCY CHK	.07	9:50am
AIR BLK	.00	9:51am
SUB TEST	.00	9:51am
AIR BLK	.00	9:52am
SUB TEST	.00	9:54am
AIR BLK	.00	9:55am

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

ORANGE COUNTY CHAPEL HILL PD 670

Serial Number: 008839      Test Record Number: 2232  
Test Date: 09/03/2020      Test Time: 9:55am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	9:56am
FLO	Pass	9:56am
FC	Pass	9:56am

Temperature Tests

Test	Status	Time
FC1	Pass	9:56am
SRC	Pass	9:56am
DET	Pass	9:56am
BAR	Pass	9:56am
BT	Pass	9:56am

Blank Tests

Test	Status	Time
AIR	Pass	9:56am

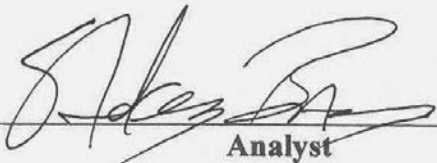
Printer Tests

Test	Status	Time
PRNT	Pass	9:56am

CRC Tests

Test	Status	Time
COMP	Pass	9:57am
CAL	Pass	9:57am

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Pasquotank Instrument Location Elizabeth City P.P.  
Instrument Serial No. 008941 315E. Main ST. Elizabeth City,  
N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 24<sup>th</sup> day of SEPTEMBER, 2001 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



James Kue  
Signature of Certifying Official

647  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.



**Intox EC/IR-II: Subject Test**

PASQUOTANK COUNTY ELIZABETH CITY 690

Serial Number: 008941  
Test Date: 09/24/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Keesler, Linda A  
Permit Number: 0045-5468  
Effective:  
07/08/2019-07/08/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test


Lot Number: AG920301  
Exp Date: 07/22/2021

Test	g/210L	Time
DIAG	Pass	12:13pm
AIR BLK	.00	12:14pm
ACCY CHK	.08	12:15pm
AIR BLK	.00	12:16pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:17pm</b>
AIR BLK	.00	12:17pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:19pm</b>
AIR BLK	.00	12:20pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

PASQUOTANK COUNTY ELIZABETH CITY 690

Serial Number: 008941      Test Record Number: 1440  
Test Date: 09/24/2020      Test Time: 12:20pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	12:21pm
FLO	Pass	12:21pm
FC	Pass	12:21pm

Temperature Tests

Test	Status	Time
FC1	Pass	12:21pm
SRC	Pass	12:21pm
DET	Pass	12:21pm
BAR	Pass	12:21pm
BT	Pass	12:21pm

Blank Tests

Test	Status	Time
AIR	Pass	12:22pm

Printer Tests

Test	Status	Time
PRNT	Pass	12:22pm

CRC Tests

Test	Status	Time
COMP	Pass	12:22pm
CAL	Pass	12:22pm

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County PASQUOTANK Instrument Location PASQUOTANK CO. Public Safety  
Instrument Serial No. 008950 Bldg, 200 E. Colonial St.,  
ELIZABETH CITY, N.C.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 24<sup>th</sup> day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

647  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

PASQUOTANK COUNTY PUBLIC SAFETY BLDG  
690

Serial Number: 008950  
Test Date: 09/24/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE


Analyst's Name: Keesler, Linda A  
Permit Number: 0045-5468  
Effective:  
07/08/2019-07/08/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test


Lot Number: AG920301  
Exp Date: 07/22/2021

Test	g/210L	Time
DIAG	Pass	12:45pm
AIR BLK	.00	12:46pm
ACCY CHK	.08	12:46pm
AIR BLK	.00	12:47pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:48pm</b>
AIR BLK	.00	12:49pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:50pm</b>
AIR BLK	.00	12:51pm

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

Intox EC/IR-II: Preventive Maintenance

PASQUOTANK COUNTY PUBLIC SAFETY BLDG 690

Serial Number: 008950      Test Record Number: 1809  
Test Date: 09/24/2020      Test Time: 12:53pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	12:53pm
FLO	Pass	12:53pm
FC	Pass	12:53pm

Temperature Tests

Test	Status	Time
FC1	Pass	12:53pm
SRC	Pass	12:53pm
DET	Pass	12:53pm
BAR	Pass	12:53pm
BT	Pass	12:53pm

Blank Tests

Test	Status	Time
AIR	Pass	12:54pm


Printer Tests

Test	Status	Time
PRNT	Pass	12:54pm

CRC Tests

Test	Status	Time
COMP	Pass	12:54pm
CAL	Pass	12:54pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Pender Instrument Location BAT Mobile Unit 12

Instrument Serial No. 008788 Burgaw

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 11 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



M. O. [Signature]  
Signature of Certifying Official

665  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

PENDER COUNTY BAT MOBILE UNIT 12 700

Serial Number: 008788

Test Date: 09/11/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Anderson, Mark G

Permit Number: 0013-1517

Effective:

09/23/2019-09/23/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG911506

Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	6:12pm
AIR BLK	.00	6:13pm
ACCY CHK	.08	6:13pm
AIR BLK	.00	6:14pm
SUB TEST	.00	6:15pm
AIR BLK	.00	6:15pm
SUB TEST	.00	6:17pm
AIR BLK	.00	6:18pm

Reported AC: 00 g/210L

  
Signature of Chemical Analyst

Court CVR

  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

**Intox EC/IR-II: Preventive Maintenance**

PENDER COUNTY BAT MOBILE UNIT 12 700

Serial Number: 008788      Test Record Number: 1573  
Test Date: 09/11/2020      Test Time: 6:32pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	6:33pm
FLO	Pass	6:33pm
FC	Pass	6:33pm

Temperature Tests

Test	Status	Time
FC1	Pass	6:33pm
SRC	Pass	6:33pm
DET	Pass	6:33pm
BAR	Pass	6:33pm
BT	Pass	6:33pm

Blank Tests

Test	Status	Time
AIR	Pass	6:34pm

Printer Tests

Test	Status	Time
PRNT	Pass	6:34pm

CRC Tests

Test	Status	Time
COMP	Pass	6:34pm
CAL	Pass	6:34pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
**Analyst**



DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Perquimans Instrument Location Perquimans Co. S.O.  
Instrument Serial No. 008921 110 N. Church St., Hertford, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 23rd day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

643  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

PERQUIMANS COUNTY PERQUIMANS CO SO 710

Serial Number: 008921  
Test Date: 09/23/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE


Analyst's Name: GUARD, KELLY G  
Permit Number: 12955E  
Effective:  
06/01/2019-06/01/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

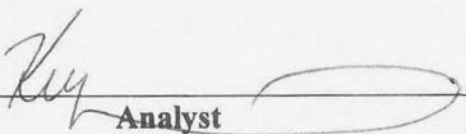
Lot Number: AG919901  
Exp Date: 07/18/2021

Test	g/210L	Time
DIAG	Pass	10:37am
AIR BLK	.00	10:37am
ACCY CHK	.08	10:38am
AIR BLK	.00	10:39am
<b>SUB TEST</b>	<b>.00</b>	<b>10:39am</b>
AIR BLK	.00	10:40am
<b>SUB TEST</b>	<b>.00</b>	<b>10:42am</b>
AIR BLK	.00	10:43am

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

Intox EC/IR-II: Preventive Maintenance

PERQUIMANS COUNTY PERQUIMANS CO SO 710

Serial Number: 008921      Test Record Number: 956  
Test Date: 09/23/2020      Test Time: 10:44am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	10:44am
FLO	Pass	10:44am
FC	Pass	10:44am

Temperature Tests

Test	Status	Time
FC1	Pass	10:44am
SRC	Pass	10:44am
DET	Pass	10:44am
BAR	Pass	10:44am
BT	Pass	10:44am

Blank Tests

Test	Status	Time
AIR	Pass	10:45am

Printer Tests

Test	Status	Time
PRNT	Pass	10:45am

CRC Tests

Test	Status	Time
COMP	Pass	10:45am
CAL	Pass	10:45am

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD**  
**INTOXIMETERS, MODEL INTOX EC/IR II and**  
**MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County RH Instrument Location RH G. Detention Center  
Instrument Serial No. 008847 124 New Hope Rd., Greenville, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 11<sup>th</sup> day of September, 2010 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

643  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

PITT COUNTY PITT CO DETENTION 730

Serial Number: 008847  
Test Date: 09/16/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: GUARD, KELLY G  
Permit Number: 12955E  
Effective:  
06/01/2019-06/01/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG920301  
Exp Date: 07/22/2021

Test	g/210L	Time
DIAG	Pass	11:34am
AIR BLK	.00	11:35am
ACCY CHK	.07	11:35am
AIR BLK	.00	11:36am
SUB TEST	.00	11:37am
AIR BLK	.00	11:38am
SUB TEST	.00	11:39am
AIR BLK	.00	11:40am

Reported AC: .00 g/210L

  
\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007

Intox EC/IR-II: Preventive Maintenance

PITT COUNTY PITT CO DETENTION 730

Serial Number: 008847      Test Record Number: 712  
Test Date: 09/16/2020      Test Time: 11:42am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	11:42am
FLO	Pass	11:42am
FC	Pass	11:42am

Temperature Tests

Test	Status	Time
FC1	Pass	11:43am
SRC	Pass	11:43am
DET	Pass	11:43am
BAR	Pass	11:43am
BT	Pass	11:43am

Blank Tests

Test	Status	Time
AIR	Pass	11:43am

Printer Tests

Test	Status	Time
PRNT	Pass	11:43am

CRC Tests

Test	Status	Time
COMP	Pass	11:43am
CAL	Pass	11:43am

Preventive Maintenance  
Status: Pass



**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Robeson Instrument Location BAT Mobile Unit #5  
Instrument Serial No. 008575 St. Pauls PD

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 6 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

664  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

ROBESON COUNTY BAT MOBILE UNIT 5 770

Serial Number: 008575  
Test Date: 09/04/2020

Citation Number: M0000000-0  
Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: Todd, Shane C  
Permit Number: 0035-4789  
Effective:  
06/08/2020-06/08/2022

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG934303  
Exp Date: 12/09/2021

Test	g/210L	Time
DIAG	Pass	8:24pm
AIR BLK	.00	8:25pm
ACCY CHK	.08	8:26pm
AIR BLK	.00	8:27pm
<b>SUB TEST</b>	<b>.00</b>	<b>8:28pm</b>
AIR BLK	.00	8:28pm
<b>SUB TEST</b>	<b>.00</b>	<b>8:30pm</b>
AIR BLK	.00	8:31pm

Reported AC: .00 g/210L

  
Signature of Chemical Analyst

Court CVR

  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**



Intox EC/IR-II: Preventive Maintenance

ROBESON COUNTY BAT MOBILE UNIT 5 770

Serial Number: 008575      Test Record Number: 1237  
Test Date: 09/04/2020      Test Time: 8:32pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	8:32pm
FLO	Pass	8:32pm
FC	Pass	8:33pm

Temperature Tests

Test	Status	Time
FC1	Pass	8:33pm
SRC	Pass	8:33pm
DET	Pass	8:33pm
BAR	Pass	8:33pm
BT	Pass	8:33pm

Blank Tests

Test	Status	Time
AIR	Pass	8:33pm

Printer Tests

Test	Status	Time
PRNT	Pass	8:33pm

CRC Tests

Test	Status	Time
COMP	Pass	8:33pm
CAL	Pass	8:33pm

Preventive Maintenance  
Status: Pass



**Analyst**

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Robeson Instrument Location BAT Mobile Unit #5  
Instrument Serial No. 008704 ST. Paul's PD

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 4 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



  
Signature of Certifying Official 664  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

ROBESON COUNTY BAT MOBILE UNIT 5 770

Serial Number: 008704

Test Date: 09/04/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Todd, Shane C

Permit Number: 0035-4789

Effective:

06/08/2020-06/08/2022

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG807101

Exp Date: 12/03/2021

Test	g/210L	Time
DIAG	Pass	8:22pm
AIR BLK	.00	8:23pm
ACCY CHK	.08	8:23pm
AIR BLK	.00	8:24pm
SUB TEST	.00	8:25pm
AIR BLK	.00	8:26pm
SUB TEST	.00	8:27pm
AIR BLK	.00	8:28pm

Reported AC: .00 g/210L

  
Signature of Chemical Analyst

Court CVR

  
Analyst

**This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007**

**Intox EC/IR-II: Preventive Maintenance**

**ROBESON COUNTY BAT MOBILE UNIT 5 770**

Serial Number: 008704      Test Record Number: 659  
Test Date: 09/04/2020      Test Time: 8:36pm EDT

System Check: *Passed*

**Baseline Tests**

Test	Status	Time
IR	Pass	8:36pm
FLO	Pass	8:36pm
FC	Pass	8:36pm

**Temperature Tests**

Test	Status	Time
FC1	Pass	8:37pm
SRC	Pass	8:37pm
DET	Pass	8:37pm
BAR	Pass	8:37pm
BT	Pass	8:37pm

**Blank Tests**

Test	Status	Time
AIR	Pass	8:37pm

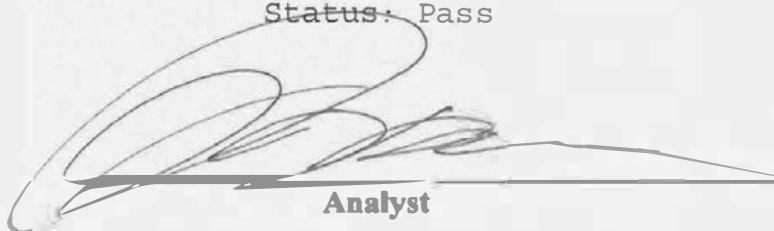
**Printer Tests**

Test	Status	Time
PRNT	Pass	8:37pm

**CRC Tests**

Test	Status	Time
COMP	Pass	8:37pm
CAL	Pass	8:37pm

Preventive Maintenance  
Status: Pass



Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County ROCKINGHAM Instrument Location EDEN

Instrument Serial No. 008636 POLICE DEPT.

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 3 day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

1069  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

ROCKINGHAM COUNTY EDEN PD 780

Serial Number: 008636

Test Date: 09/03/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Oligmueller Jr., Leo A

Permit Number: 0035-3799

Effective:

08/04/2020-08/04/2022

Officer's Name: NONE,

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG911506


Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	2:29pm
AIR BLK	.00	2:30pm
ACCY CHK	.08	2:30pm
AIR BLK	.00	2:32pm
<b>SUB TEST</b>	<b>.00</b>	<b>2:32pm</b>
AIR BLK	.00	2:34pm
<b>SUB TEST</b>	<b>.00</b>	<b>2:35pm</b>
AIR BLK	.00	2:36pm

Reported AC: .00 g/210L

\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
Analyst

**Intox EC/IR-II: Preventive Maintenance**

ROCKINGHAM COUNTY EDEN PD 780

Serial Number: 008636      Test Record Number: 2092  
Test Date: 09/03/2020      Test Time: 2:39pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	2:39pm
FLO	Pass	2:39pm
FC	Pass	2:39pm

Temperature Tests

Test	Status	Time
FC1	Pass	2:39pm
SRC	Pass	2:39pm
DET	Pass	2:39pm
BAR	Pass	2:39pm
BT	Pass	2:39pm

Blank Tests

Test	Status	Time
AIR	Pass	2:40pm

Printer Tests

Test	Status	Time
PRNT	Pass	2:40pm

CRC Tests

Test	Status	Time
COMP	Pass	2:40pm
CAL	Pass	2:40pm

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County ROCKINGHAM Instrument Location REIDSVILLE

Instrument Serial No. 008784 POLICE DEPARTMENT

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 3 day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

669  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.



**Intox EC/IR-II: Subject Test**

ROCKINGHAM COUNTY REIDSVILLE PD 780

Serial Number: 008784  
Test Date: 09/03/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Oligmueller Jr., Leo A

Permit Number: 0035-3799

Effective:

08/04/2020-08/04/2022

Officer's Name: NONE,

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG911506

Exp Date: 04/25/2021

Test	g/210L	Time
DIAG	Pass	3:16pm
AIR BLK	.00	3:17pm
ACCY CHK	.08	3:17pm
AIR BLK	.00	3:18pm
<b>SUB TEST</b>	<b>.00</b>	<b>3:19pm</b>
AIR BLK	.00	3:20pm
<b>SUB TEST</b>	<b>.00</b>	<b>3:22pm</b>
AIR BLK	.00	3:23pm

Reported AC: .00 g/210L

\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
Analyst

This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007

Intox EC/IR-II: Preventive Maintenance

ROCKINGHAM COUNTY REIDSVILLE PD 780

Serial Number: 008784      Test Record Number: 1215  
Test Date: 09/03/2020      Test Time: 3:25pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	3:26pm
FLO	Pass	3:26pm
FC	Pass	3:26pm

Temperature Tests

Test	Status	Time
FC1	Pass	3:26pm
SRC	Pass	3:26pm
DET	Pass	3:26pm
BAR	Pass	3:26pm
BT	Pass	3:26pm

Blank Tests

Test	Status	Time
AIR	Pass	3:26pm


Printer Tests

Test	Status	Time
PRNT	Pass	3:26pm

CRC Tests

Test	Status	Time
COMP	Pass	3:27pm
CAL	Pass	3:27pm

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County ROCKINGHAM Instrument Location ROCKINGHAM CO. JAIL

Instrument Serial No. 008796 WENTWORTH, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 3 day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

669  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

ROCKINGHAM COUNTY ROCKINGHAM CO JAIL  
780

Serial Number: 008796  
Test Date: 09/03/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Oligmueller Jr., Leo A

Permit Number: 0035-3799

Effective:

08/04/2020-08/04/2022

Officer's Name: NONE,

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG919901

Exp Date: 07/18/2021

Test	g/210L	Time
DIAG	Pass	12:57pm
AIR BLK	.00	12:58pm
ACCY CHK	.08	12:59pm
AIR BLK	.00	1:00pm
<b>SUB TEST</b>	<b>.00</b>	<b>1:00pm</b>
AIR BLK	.00	1:01pm
<b>SUB TEST</b>	<b>.00</b>	<b>1:03pm</b>
AIR BLK	.00	1:04pm

Reported AC: .00 g/210L

Signature of Chemical Analyst

Court CVR

  
Analyst

This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007

Intox EC/IR-II: Preventive Maintenance

ROCKINGHAM COUNTY ROCKINGHAM CO JAIL 780

Serial Number: 008796      Test Record Number: 3021  
Test Date: 09/03/2020      Test Time: 1:05pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	1:05pm
FLO	Pass	1:05pm
FC	Pass	1:05pm

Temperature Tests

Test	Status	Time
FC1	Pass	1:05pm
SRC	Pass	1:05pm
DET	Pass	1:05pm
BAR	Pass	1:05pm
BT	Pass	1:05pm

Blank Tests

Test	Status	Time
AIR	Pass	1:06pm

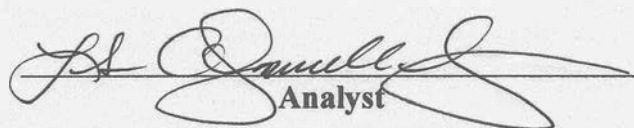
Printer Tests

Test	Status	Time
PRNT	Pass	1:06pm

CRC Tests

Test	Status	Time
COMP	Pass	1:06pm
CAL	Pass	1:06pm

Preventive Maintenance  
Status: Pass

  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County ROCKINGHAM Instrument Location MADISON

Instrument Serial No. 008802 POLICE DEPARTMENT

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 3 day of SEPTEMBER, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Signature]  
Signature of Certifying Official

669  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

ROCKINGHAM COUNTY MADISON PD 780

Serial Number: 008802

Test Date: 09/03/2020

Citation Number: M0000000-0

Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Oligmueller Jr., Leo A

Permit Number: 0035-3799

Effective:

08/04/2020-08/04/2022

Officer's Name: NONE,

Type of Agency: FTA

Agency: DHHS

Test Type: Breath Test

Lot Number: AG018202

Exp Date: 06/30/2022

Test	g/210L	Time
DIAG	Pass	12:05pm
AIR BLK	.00	12:06pm
ACCY CHK	.08	12:07pm
AIR BLK	.00	12:07pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:08pm</b>
AIR BLK	.00	12:09pm
<b>SUB TEST</b>	<b>.00</b>	<b>12:11pm</b>
AIR BLK	.00	12:11pm

Reported AC: .00 g/210L

\_\_\_\_\_  
Signature of Chemical Analyst

Court CVR

  
Analyst

Intox EC/IR-II: Preventive Maintenance

ROCKINGHAM COUNTY MADISON PD 780

Serial Number: 008802      Test Record Number: 884  
Test Date: 09/03/2020      Test Time: 12:13pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	12:13pm
FLO	Pass	12:13pm
FC	Pass	12:13pm

Temperature Tests

Test	Status	Time
FC1	Pass	12:13pm
SRC	Pass	12:13pm
DET	Pass	12:13pm
BAR	Pass	12:13pm
BT	Pass	12:13pm

Blank Tests

Test	Status	Time
AIR	Pass	12:14pm


Printer Tests

Test	Status	Time
PRNT	Pass	12:14pm

CRC Tests

Test	Status	Time
COMP	Pass	12:14pm
CAL	Pass	12:14pm

Preventive Maintenance  
Status: Pass

  
Analyst



DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II**

County Union Instrument Location Union County 50  
Instrument Serial No. 008866 3344 Presson Road, Monroe

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II to be followed at least once every four months are:

1. Verify the ethanol gas canister displays pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
2. Verify instrument displays time and date;
3. Initiate breath test sequence;
4. Enter information as prompted;
5. Verify instrument accuracy;
6. When "PLEASE BLOW" appears, collect breath sample;
7. When "PLEASE BLOW" appears, collect breath sample;
8. Print test record;
9. Verify Diagnostic Program; and
10. Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 24th day of September, 2020, the foregoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



Joseph E. Hitt  
Signature of Certifying Official

650  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

**Intox EC/IR-II: Subject Test**

UNION COUNTY UNION COUNTY SO 890

Serial Number: 008866  
Test Date: 09/24/2020

Citation Number: M0000000-0  
Subject's Name:

PREVENTIVE, MAINTENANCE

Subject's Date of Birth: 11/11/1911

Subject's Sex: Male

Driver's License State: XX

Driver's License Number: NONE

Analyst's Name: Hutchinson, Joseph E

Permit Number: 0035-6075

Effective:

07/09/2019-07/09/2021

Officer's Name: NONE, NONE

Type of Agency: FTA

Agency: DHHS

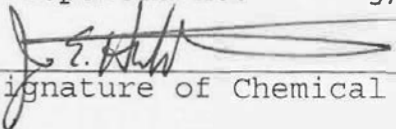
Test Type: Breath Test

Lot Number: AG904301

Exp Date: 02/12/2021

Test	g/210L	Time
DIAG	Pass	3:03pm
AIR BLK	.00	3:04pm
ACCY CHK	.07	3:05pm
AIR BLK	.00	3:06pm
<b>SUB TEST</b>	<b>.00</b>	<b>3:06pm</b>
AIR BLK	.00	3:07pm
<b>SUB TEST</b>	<b>.00</b>	<b>3:09pm</b>
AIR BLK	.00	3:10pm

Reported AC: .00 g/210L

  
Signature of Chemical Analyst

Court CVR

  
Analyst

Intox EC/IR-II: Preventive Maintenance

UNION COUNTY UNION COUNTY SO 890

Serial Number: 008866      Test Record Number: 3724  
Test Date: 09/24/2020      Test Time: 3:10pm EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	3:11pm
FLO	Pass	3:11pm
FC	Pass	3:11pm

Temperature Tests

Test	Status	Time
FC1	Pass	3:11pm
SRC	Pass	3:11pm
DET	Pass	3:11pm
BAR	Pass	3:11pm
BT	Pass	3:11pm

Blank Tests

Test	Status	Time
AIR	Pass	3:11pm

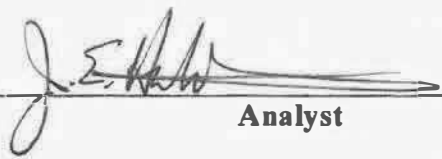
Printer Tests

Test	Status	Time
PRNT	Pass	3:12pm

CRC Tests

Test	Status	Time
COMP	Pass	3:12pm
CAL	Pass	3:12pm

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
Analyst

DEPARTMENT OF HEALTH AND HUMAN SERVICES  
FORENSIC TESTS FOR ALCOHOL BRANCH

**PREVENTIVE MAINTENANCE RECORD  
INTOXIMETERS, MODEL INTOX EC/IR II and  
MODEL INTOX EC/IR II (Enhanced with serial number 10,000 or higher)**

County Yancey Instrument Location Yancey Co. Jail

Instrument Serial No. 009606 Burnsville, NC

The preventive maintenance procedures for the Intoximeters, Model Intox EC/IR II and Model Intox EC/IR II (Enhanced with serial number 10,000 or higher) to be followed at least once every four months are:

- (1) Verify the ethanol gas canister displays at least 51 pounds per square inch (psi) of pressure, or the alcoholic breath simulator thermometer shows 34 degrees, plus or minus .2 degree centigrade;
- (2) Verify instrument displays time and date;
- (3) Initiate breath test sequence;
- (4) Enter information as prompted;
- (5) Verify instrument accuracy;
- (6) When "PLEASE BLOW" appears, collect breath sample;
- (7) When "PLEASE BLOW" appears, collect breath sample;
- (8) Print test record;
- (9) Run diagnostic program and confirm preventive maintenance status of "Pass"; and
- (10) Verify that the ethanol gas canister is being changed before expiration date, or the alcoholic breath simulator solution is being changed every four months or after 125 Alcoholic Breath Simulator tests, whichever occurs first.

I certify that on the 21 day of September, 2020 the forgoing preventive maintenance procedures were performed on the instrument indicated above, in accordance with current regulations of the N.C. Department of Health and Human Services, and the instrument is functioning properly.



[Handwritten Signature]  
Signature of Certifying Official

668  
Certificate Number

A signed original of the preventive maintenance record shall be kept on file for at least three years.

Intox EC/IR-II: Subject Test

YANCEY COUNTY YANCEY COUNTY JAIL 990

Serial Number: 008606  
Test Date: 09/21/2020

Citation Number: M0000000-0

Subject's Name:  
PREVENTIVE, MAINTENANCE  
Subject's Date of Birth: 11/11/1911  
Subject's Sex: Male  
Driver's License State: XX  
Driver's License Number: NONE

Analyst's Name: LOFTIS, BENJAMIN C  
Permit Number: 24801E  
Effective:  
07/01/2019-07/01/2021

Officer's Name: NONE, NONE  
Type of Agency: FTA  
Agency: DHHS  
Test Type: Breath Test

Lot Number: AG902201  
Exp Date: 01/22/2021

Test	g/210L	Time
DIAG	Pass	8:24am
AIR BLK	.00	8:25am
ACCY CHK	.08	8:25am
AIR BLK	.00	8:27am
SUB TEST	.00	8:27am
AIR BLK	.00	8:28am
SUB TEST	.00	8:30am
AIR BLK	.00	8:31am

Reported AC: .00 g/210L

Signature of Chemical Analyst

Court CVR

  
\_\_\_\_\_  
Analyst

This form is used when performing Preventive Maintenance procedures  
Forensic Tests for Alcohol Branch  
Department of Health and Human Services  
Rev. 12/2007

Intox EC/IR-II: Preventive Maintenance

YANCEY COUNTY YANCEY COUNTY JAIL 990

Serial Number: 008606      Test Record Number: 375  
Test Date: 09/21/2020      Test Time: 8:31am EDT

System Check: *Passed*

Baseline Tests

Test	Status	Time
IR	Pass	8:32am
FLO	Pass	8:32am
FC	Pass	8:32am

Temperature Tests

Test	Status	Time
FC1	Pass	8:32am
SRC	Pass	8:32am
DET	Pass	8:32am
BAR	Pass	8:32am
BT	Pass	8:32am

Blank Tests

Test	Status	Time
AIR	Pass	8:32am


Printer Tests

Test	Status	Time
PRNT	Pass	8:33am

CRC Tests

Test	Status	Time
COMP	Pass	8:33am
CAL	Pass	8:33am

Preventive Maintenance  
Status: Pass

  
\_\_\_\_\_  
Analyst